


G03290066

Fig. 2: Checking Wheel For Radial Runout
Courtesy of BMW OF NORTH AMERICA, INC.

If applicable, remove balance weights.

Check lateral runout of rim with special tool 36 1 030 (measuring fixture). Refer to **WHEEL AND TIRES - TECHNICAL DATA** .

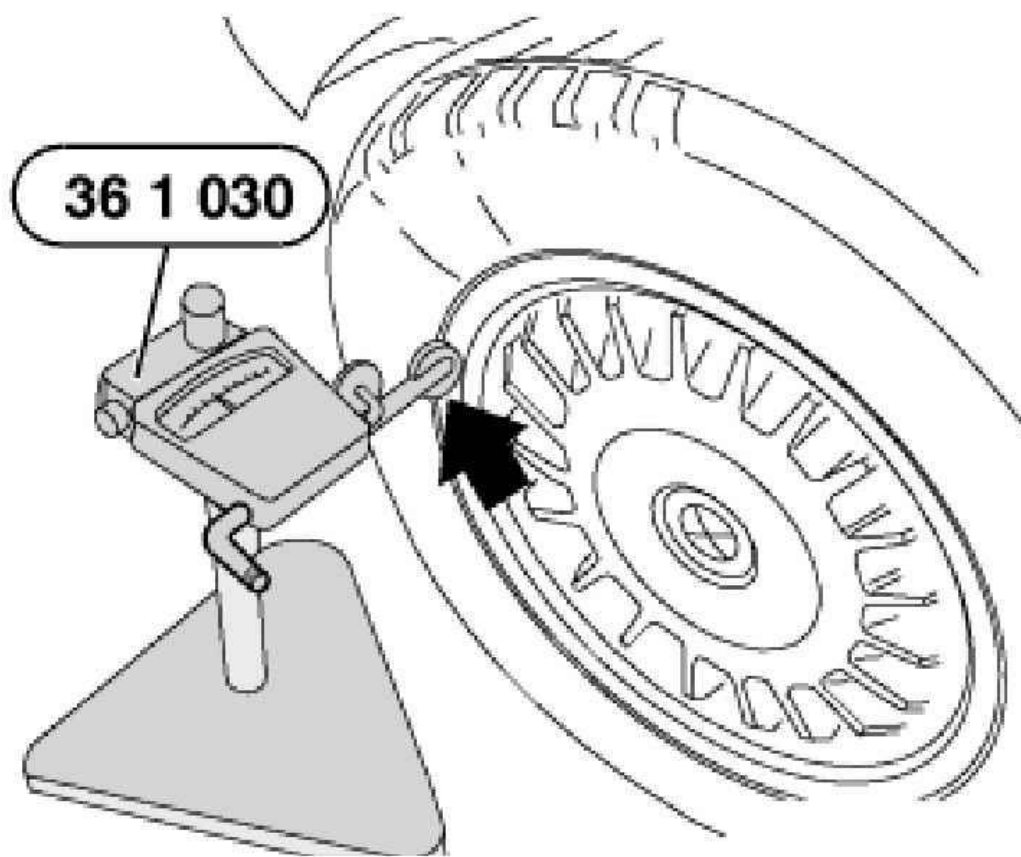

G03290067

Fig. 3: Checking Lateral Runout Of Rim

Courtesy of BMW OF NORTH AMERICA, INC.

Check radial runout of rim with special tool 36 1 030 (measuring fixture). Refer to **WHEEL AND TIRES - TECHNICAL DATA** .