

Seat - Remove and Install

SMCS - 7312-011; 7312-012

Removal Procedure

1. Open the cab door. Lock the cab door in the OPEN position.

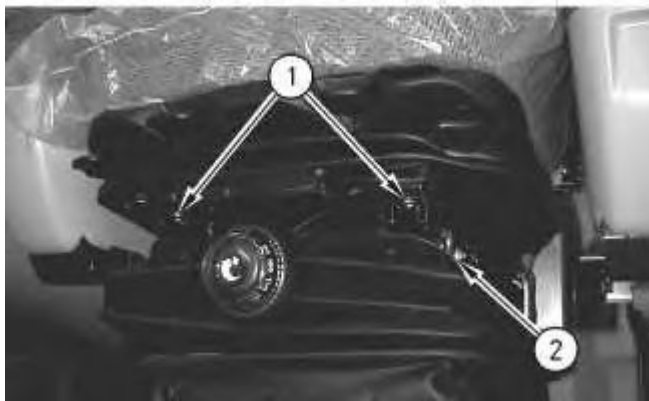


Illustration 1

g00364592

2. Remove four socket head bolts (1) .
3. If the seat assembly is equipped with a seat heater, disconnect the wiring harness for the seat heater.
4. Use two people to remove seat assembly (2) from the cab. The weight of the seat assembly is approximately 34 kg (75 lb).

Installation Procedure

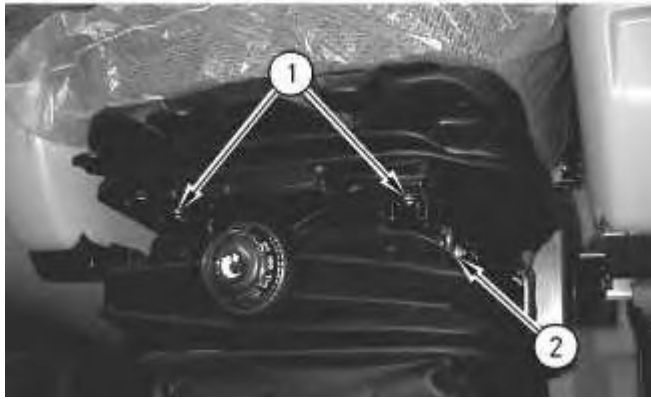


Illustration 2

g00364592

1. Use two people to position seat assembly (2) in the cab. The weight of the seat assembly is approximately 34 kg (75 lb).
 2. Install the four socket head bolts (1) .
 3. If the seat assembly is equipped with a seat heater, connect the wiring harness for the seat heater.
 4. Sit in the seat assembly with the operator's back against the back of the seat assembly. Adjust the seat assembly so that the operator is able to move the pedals completely forward and rearward. Refer to Operation and Maintenance Manual, "Seat Adjustment" for more information.
 5. Close the door to the cab.
-

Track Carrier Roller - Remove

SMCS - 4154-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
(A)	8T-5255	Hydraulic Jack	1

1. Start the engine. Park the machine on a hard, level surface. Shut off the engine.



WARNING

Personal injury or death can result from grease and oil coming out of the relief valve.

Grease and oil are under high pressure coming out of the relief valve and can penetrate the body.

Do not watch the relief valve to see if grease is escaping. Watch the track or track adjustment cylinder to see if the track is being loosened.

Make sure the vent holes are clean before the tension is released on the track.
