



Cr1492.cdr

INDICE / INDEX / INDEX / VERZEICHNIS / INDICE

1 - ETICHETTE E TARGHETTE / LABELS AND PLATES / ETIQUETTES ET PLAQUES / AUFKLEBER UND TYPENSCHILDER / ETIQUETAS Y PLACAS	Page 16
2 - TELAIO / FRAME / CHASSIS / RAHMEN / CHASIS.....	Page 20
3 - SEDILE / SEAT / SIEGE / SITZ / ASIENTO.....	Page 26
4 - POSTO GUIDA / DRIVING POSITION / PLACE DU CONDUCTEUR / FÜHRERSITZ / PUESTO DE CONDUCCION.....	Page 28
5 - ASSALE A BILICO / REAR AXLE / ESSIEU ARRIERE / HINTERE ACHSE / EJE TRASERO.....	Page 32
6 - RUOTE POSTERIORI / REAR WHEELS / ROUES ARRIERE / HINTERRÄDER / RUEDAS TRASERAS.....	Page 34
7 - IMPIANTO GUIDA IDRAULICA TOYOTA / POWER STEERING SYSTEM TOYOTA / INSTALLATION DIRECTION ASSISTEE TOYOTA / HYDROLENKUNGSANLAGE TOYOTA / INSTALACION DIRECCION ASISTIDA	Page 36
7 - IMPIANTO GUIDA IDRAULICA KUBOTA / POWER STEERING SYSTEM KUBOTA / INSTALLATION DIRECTION ASSISTEE KUBOTA / HYDROLENKUNGSANLAGE KUBOTA / INSTALACION DIRECCION ASISTIDA	Page 38
8 - IMPIANTO IDRAULICO PRINCIPALE / MAIN HYDRAULIC SYSTEM / INSTALLATION HYDRAULIQUE PRINCIPALE / HYDRAULISCHE HAUFANLAGE / INSTALACION HYDRAULICA PRINCIPALE.....	Page 40
9 - SERBATOIO OLIO E SERBATOIO CARBURANTE / OIL TANK AND FUEL TANK / RESERVOIR D' HUILE ET RESERVOIR DE CARBURANT / ÖLBEHÄLTER UND DIESELKRAFTSTOFFBEHÄLTER / TANQUE DE ACEITE	Page 42
10 - IMPIANTO DRENAGGIO - TOYOTA - (E) - / DRAINAGE SYSTEM - TOYOTA - (E) - / INSTALLAT. DE DRAINAGE - TOYOTA - (E) - / ENTWÄSSERUNGSANLAGE - TOYOTA - (E) - / INSTALACION DESAGUE - TOYOTA -	Page 44
10 - IMPIANTO DRENAGGIO - KUBOTA - (E) - / DRAINAGE SYSTEM - KUBOTA - (E) - / INSTALLAT. DE DRAINAGE - KUBOTA - (E) - / ENTWÄSSERUNGSANLAGE - KUBOTA - (E) - / INSTALACION DESAGUE - KUBOTA -	Page 46
10 - IMPIANTO DRENAGGIO TOYOTA/KUBOTA -(H)- / DRAINAGE SYSTEM TOYOTA/KUBOTA -(H)- / INSTAL.DE DRAINAGE TOYOTA/KUBOTA -(H)- / ENTWAESSER.ANLAGE TOYOTA/KUBOTA -(H)- / INSTALAC.	Page 48
11 - IMPIANTO ALTA PRES.TOYOTA/KUBOTA -(H)- / HIGH PRES.SYSTEM TOYOTA/KUBOTA -(H)- / INST. HAUTE PRESS.TOYOTA/KUBOTA -(H)- / HOCHDRUCKANLAGE TOYOTA/KUBOTA -(H)- / INST.ALTA	Page 50
11 - IMPIANTO ALTA PRESSIONE - (E) - / HIGH PRESSURE SYSTEM - (E) - / INSTALLATION A HAUTE PRESSION - (E) - / HOCHDRUCKANLAGE - (E) - / INSTALACION DE ALTA PRESSION - (E) -	Page 52
12 - MOTORIDUTTORE / GEARED MOTOR / MOTOREDUCTEUR / RADNABENANTRIEB / MOTOREDUCTOR.....	Page 54
13 - RUOTE ANTERIORI / FRONT WHEELS / ROUES AVANT / VORDERRÄDER / RUEDAS DELANTERAS.....	Page 56
14 - RADIATORE OLIO-ACQUA / OIL-WATER RADIATOR / RADIATEUR HUILE-EAU / ÖL-WASSER-KÜHLER / RADIATOR DEL ACEITE Y DEL AGUA.....	Page 60
15 - FILTRO ARIA GPL / LPG AIR FILTER / FILTRE A AIR GPL / FLÜSSIGGAS LUFTFILTER / FILTRE DE AIRE GPL.....	Page 62
15 - FILTRO ARIA DIESEL / DIESEL AIR FILTER / FILTRE A AIR DIESEL / LUFTFILTER DIESEL / FILTRE DE AIRE DIESEL.....	Page 64
16 - GRUPPO SCARICO / EXHAUST UNIT / GROUPE ECHAPPEMENT / AUSPUFFGRUPPE / GRUPO DE ESCAPE.....	Page 66
17 - DISTRIBUTORE IDRAULICO / CONTROL VALVE / DISTRIBUTEUR HYDRAULIQUE / HYDRAULIK-STEUERBLOCK / DISTRIBUIDOR HIDRAULICO.....	Page 68
18 - COMPONENTI ELETTRICI / ELECTRICAL COMPONENTS / COMPOSANTES ELECTRIQUES / ELEKTRISCHE KOMPONENTE / COMPONENTES ELECTRICOS.....	Page 74
19 - PEDALIERA ACCELERATORE DOPPIA - (E) / DOUBLE SPEED PEDAL - (E) / PEDALIER D'ACCELERATEUR DOUBLE - (E) / DOPPELFAHRPEDAL - (E) / PEDALES ACELERADOR DUBLE - (E).....	Page 78
19 - PEDALIERA ACCELERATORE - (H) / SPEED PEDAL - (H) / PEDALIER D'ACCELERATEUR - (H) / FAHRPEDAL - (H) / PEDALES ACELERADOR - (H).....	Page 80