


HARNESS LAYOUT

Main Harness

ENGINE COMPARTMENT

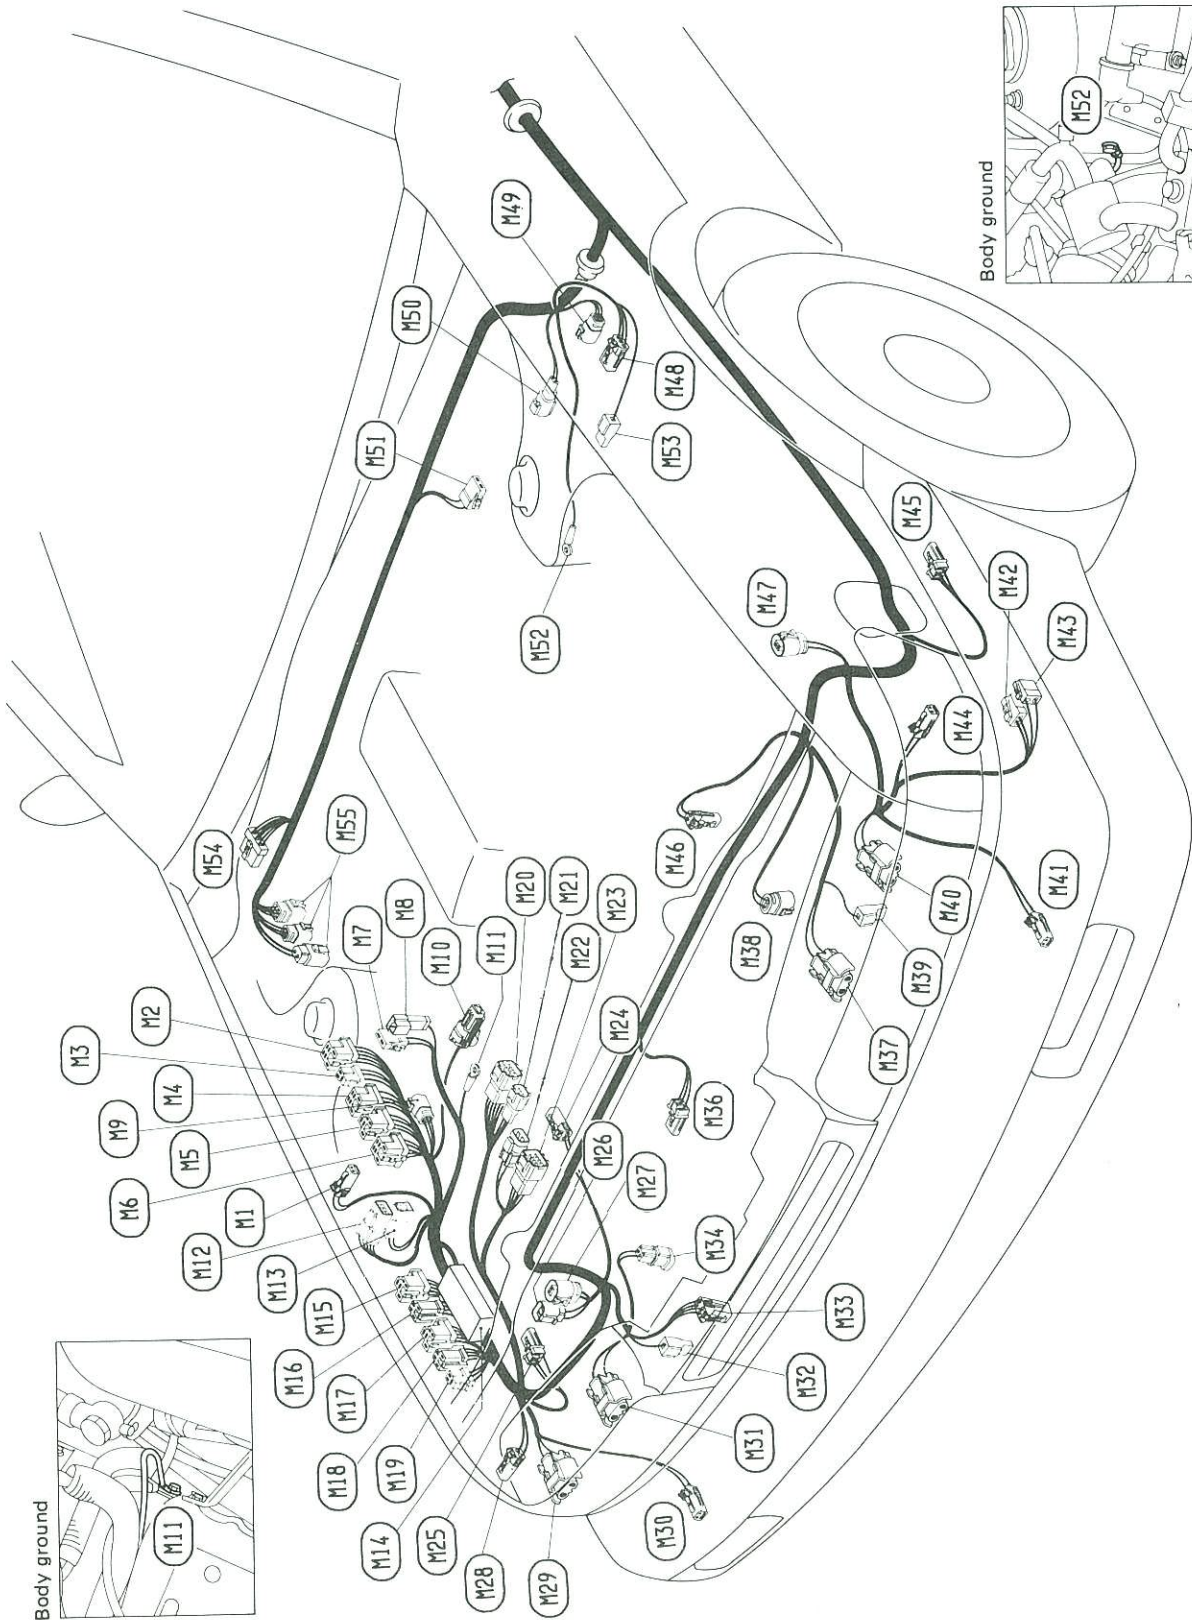

HARNESS LAYOUT

Main Harness (Cont'd)

(H1) : Dropping resistor
(H2) : Switching relay
(H3) : Theft warning horn relay
(H4) : Theft warning relay-3
(H5) : Theft warning relay-2
(H6) : Theft warning relay-1
(H7) : Battery
(H8) : Fusible link
(H9) : A.S.C.D. pump
(H10) : To (E2)
(H11) : Body ground
(H12) : To (E4)
(H13) : To (E3)
(H14) : Fusible link box & Fuse block
(H15) : Wiper relay
(H16) : Air conditioner relay
(H17) : Inhibitor relay
(H18) : Radiator fan relay
(H19) : Horn relay
(H20) : To terminal cord assembly
(H21) : Revolution sensor
(H22) : Inhibitor switch
(H23) : Inhibitor switch
(H24) : Dual-pressure switch
(H25) : Right crash zone sensor (Air bag)
(H26) : Starter relay
(H27) : Starter relay
(H28) : Front turn signal lamp R.H.
(H29) : Headlamp R.H.-1

(H30) : Front clearance lamp R.H.
(H31) : Headlamp R.H.-2
(H32) : Horn R.H.
(H33) : Sonar road surface sensor
(H34) : Radiator fan motor
(H35) : Center crash zone sensor (Air bag)
(H37) : Headlamp L.H.-2
(H38) : Ambient switch (Manual A/C)
(H39) : Ambient sensor (Auto A/C)
(H39) : Horn L.H.
(H40) : Headlamp L.H.-1
(H41) : Front clearance lamp L.H.
(H42) : Washer sensor
(H43) : Washer motor
(H44) : Front turn signal lamp L.H.
(H45) : Left crash zone sensor (Air bag)
(H46) : Thermo switch
(H47) : Hood switch
(H48) : Front shock absorber actuator-L.H.
(H49) : To (F2)
(H50) : Front sensor L.H.
(H50) : (For anti-lock braking system)
(H51) : Brake fluid level switch
(H52) : Body ground
(H53) : Theft warning horn
(H54) : Wiper motor
(H55) : Actuator (For anti-lock braking system)