



RP4018

KEY	PART NO.	PART NAME	QTY	Pump Serial No.	REMARKS	
1	R45438	FITTING	8			
2	R56463	O-RING	8			
3	R56749	DUST SHIELD	8		(SUB FOR AR101236)	
4	R62372	SPRING	8		(AR76762 NLA)	
4	A-R62372	SPRING	8			
5	R27150	PISTON	8			
5	A-R27150	PISTON	8			
6	R26137	SNAP RING	1			
7	RE28790	SEAL	1		(SUB FOR AR52224)	
7	A-472258-I	SEAL	1			
7	A-472258-P	SEAL	1			
8	R78293	FITTING	8			
9	R27149	O-RING	8			
10	AR53301	VALVE	8		(INLET)	
10	A-AR53301	VALVE	8			
11	R105583	VALVE SEAT INSERT	8			
11	A-R105583	VALVE SEAT INSERT	8			
12	F3171R	O-RING	1		(USE WITH R71586)	
12	A-F3171R	O-RING	1			