



LX390059

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER025656	Washer	1		
2	ER121955	Knob	1		
3	ER395900	Bolt	2		
4	ER193710	Gasket	3		
5	ER437207	Bracket	1		
6	ER201641	Stop	1		
7	ER201644	Pin	1		
8	ER023457	Bolt	8		
9	ER206114	Washer	8		
10	ER023066	Washer	4		
11	ER447071	Plate	1		
12	ER498351	Cover	1	LH	
13	ER491709	Cover	1	RH	
14	ER463430	Lock	1		
15	ER022087	Nut	2		
16	ER450588	Bracket	1		
17	ER499042	Bracket	1		
18	ER208891	Rivet	2		
19	ER020749	Bolt	4		