


Replace Hydraulic Tank Breather

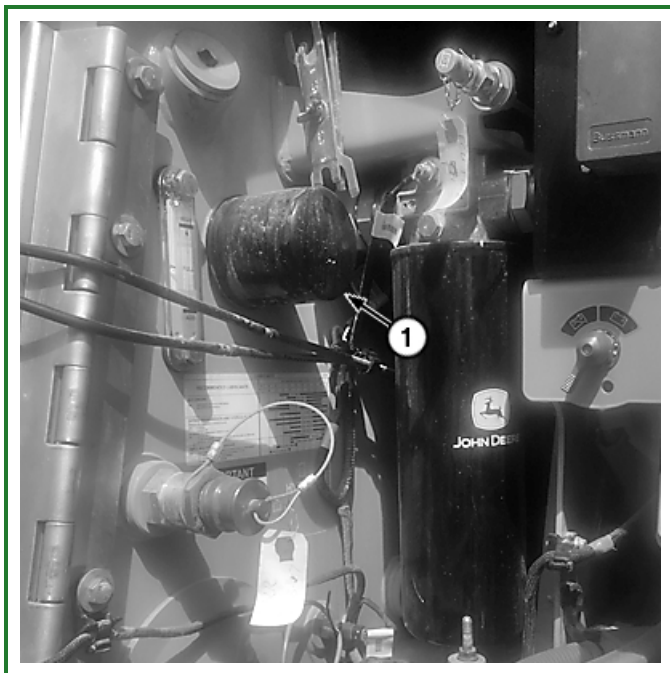

TX1261864-UN: Hydraulic Tank Breather


LEGEND:

1 - Hydraulic Tank Breather

1. Park machine on level surface and lower all equipment to ground.
2. Engage park lock levers in up (locked) position.
3. Press engine stop switch.
4. Open right service door.
5. Turn hydraulic tank breather counterclockwise to remove.
6. Install new hydraulic tank breather.
7. Close right service door.

BB11933,000006E-19-20180830

Replace Fuel Tank Breather

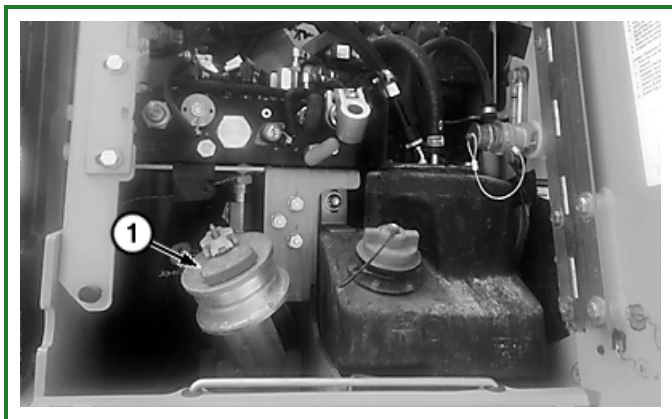

TX1261866-UN: Fuel Tank Breather

LEGEND:

1 - Fuel Tank Breather

1. Park machine on level surface and lower all equipment to ground.
2. Engage park lock levers in up (locked) position.
3. Press engine stop switch.
4. Open left service door.
5. Remove fuel tank cap from fuel tank.
6. Remove cap screws from inside fuel tank cap to remove fuel tank breather.
7. Install new fuel tank breather and cap screws.
8. If necessary, fill fuel tank. Install fuel cap.
9. Close left service door.

BB11933,000006F-19-20180830