

TX1233598-UN: Left-Hand Electrohydraulic (EH) Joystick

LEGEND:

- 1 - Left-Hand Electrohydraulic (EH) Joystick
- 2 - Forward, Neutral, and Reverse (FNR) Switch
- 3 - Gear Down Button
- 4 - Gear Up Button
- 5 - Blade Pitch Roller Switch
- 6 - Ripper Roller Switch
- 7 - Left Blade Auto Button
- 8 - Left Increment Button
- 9 - Left Decrement Button
- 10 - Circle Rotate Roller Switch
- 11 - Not Used

The left-hand electrohydraulic (EH) joystick (1) controls the steering (left turn and right turn) and the lifting and lowering of the left side of blade.

NOTE:

Lever steering enable switch and hydraulic enable switch must both be on for lever steering to work. For more information, see operator's manual.

- Pull left-hand electrohydraulic (EH) joystick back to lift left blade.
- Push left-hand electrohydraulic (EH) joystick forward to lower left blade.
- Move left-hand electrohydraulic (EH) joystick left to steer left.
- Move left-hand electrohydraulic (EH) joystick right to steer right.


Operation of Transmission

Press forward, neutral, and reverse (FNR) switch (2) to position machine in desired direction.


Press gear down button (3) to decrease transmission gear.

Press gear up button (4) to increase transmission gear.

Right-Hand Electrohydraulic (EH) Joystick

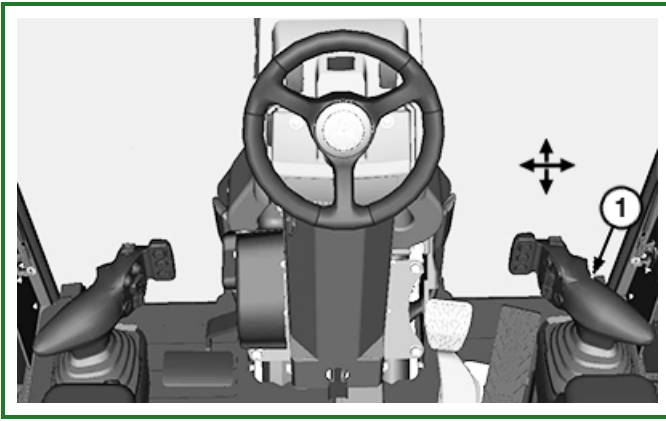

TX1234267-UN: Right-Hand Electrohydraulic (EH) Joystick

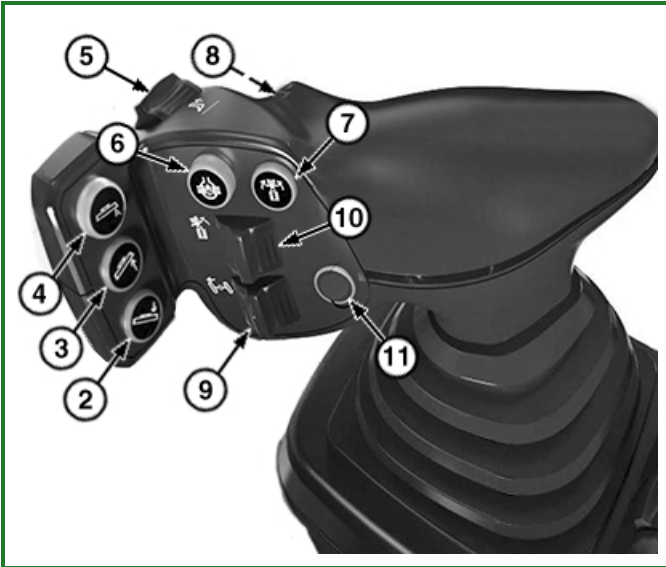

TX1244550-UN: Right-Hand Electrohydraulic (EH) Joystick

LEGEND:

- 1 - Right-Hand Electrohydraulic (EH) Joystick
- 2 - Right Decrement Button
- 3 - Right Increment Button
- 4 - Right Blade Auto Button
- 5 - Scarifier Roller Switch
- 6 - Differential Lock Switch
- 7 - Return-to-Straight Switch
- 8 - Circle Side Shift Roller Switch
- 9 - Wheel Lean Roller Switch
- 10 - Articulation Roller Switch
- 11 - Not Used

The right-hand electrohydraulic (EH) joystick (1) controls the lifting and lowering of the right side of blade and left and right side shift.

- Pull right-hand electrohydraulic (EH) joystick back to lift right blade.
- Push right-hand electrohydraulic (EH) joystick forward to lower right blade.
- Move right-hand electrohydraulic (EH) joystick left to side shift left.
- Move right-hand electrohydraulic (EH) joystick right to side shift right.