




15) Remove fuel tank air bleeding hose (19) from its clamp.

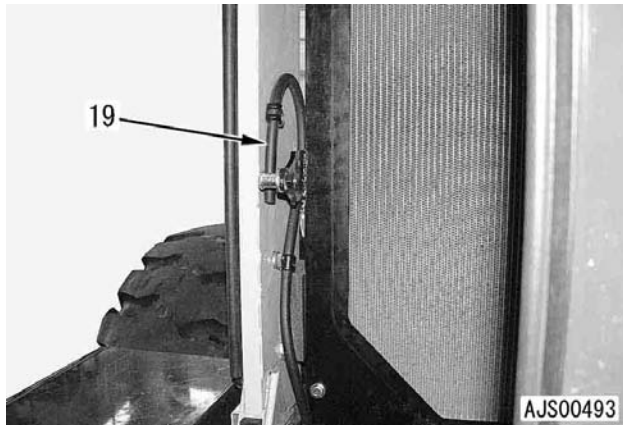

16) Remove left and right covers (20).

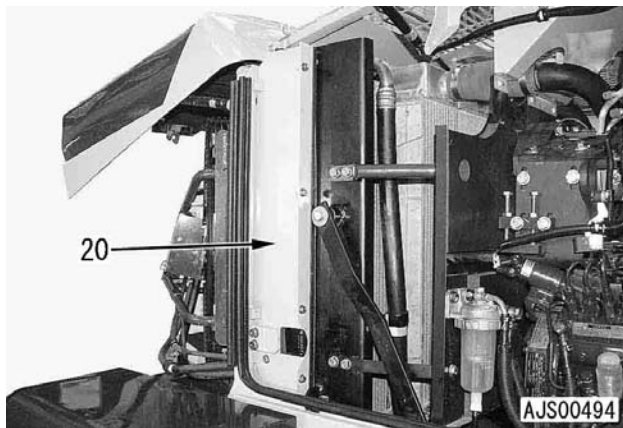


17) Remove engine hood mounting bolts (21), 3 pieces on each side.

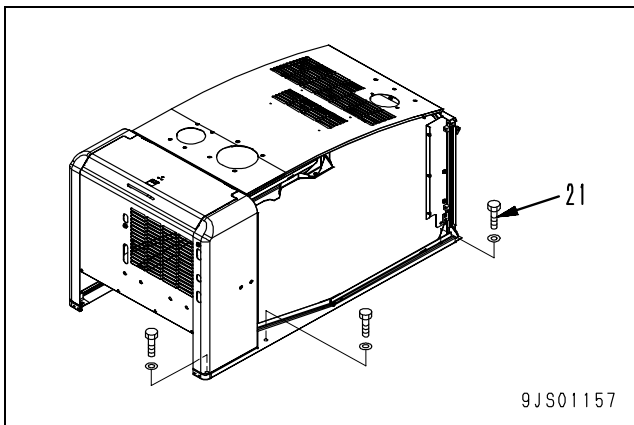


18) Lift off engine hood assembly (22).
 ★ Carefully remove the air conditioner condenser so that you avoid damaging it.




3. Remove the air conditioner compressor according to the following procedure.
 - 1) Disconnect wiring connector E16 (23) and ground terminal E22 (24).
 - 2) Remove cover (25).
 - 3) Loosen 2 mounting bolts (26) and 2 mounting bolts (27).
 - 4) Loosen 2 locknuts (28) and 2 adjustment bolts (29).
 - 5) Remove air conditioner compressor belt (30). [*2]
 - 6) Remove 2 mounting bolts (26), 2 mounting bolts (27), and air conditioner compressor and bracket assembly (31).
 - ★ Place the air conditioner piping by the side of the engine without disconnecting it.

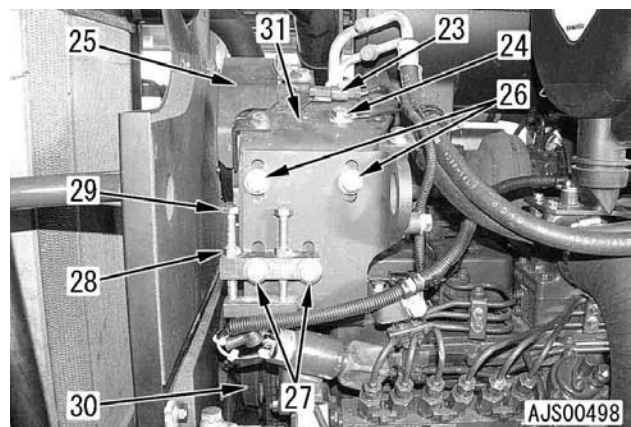


4. Disconnect the following wiring connectors and terminals.
 - (32): Engine grounding
 - (33): E13
 - (34): E10
 - (35): E02
 - (36): E11

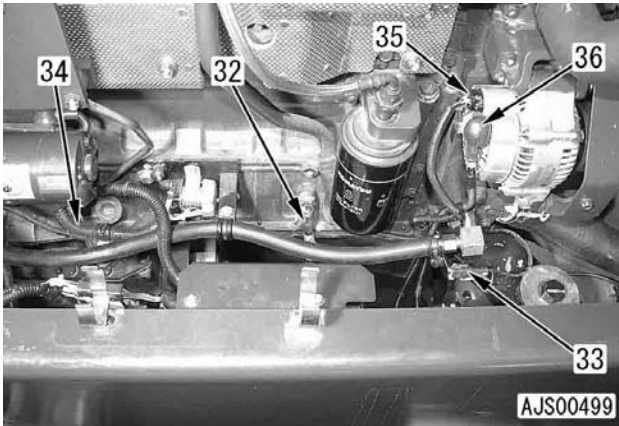


- (37): ER1
- (38): ER2
- (39): ER3

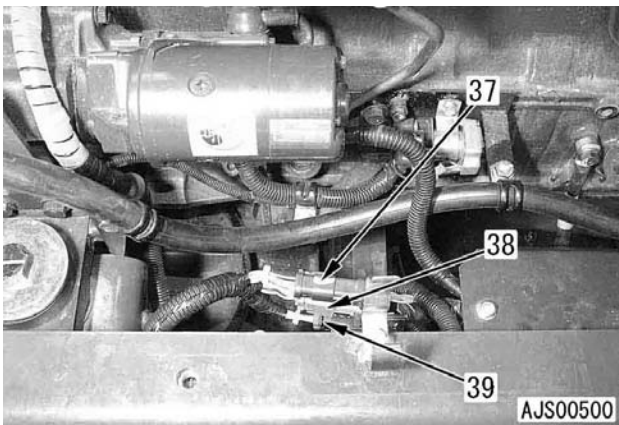

- (40): T01

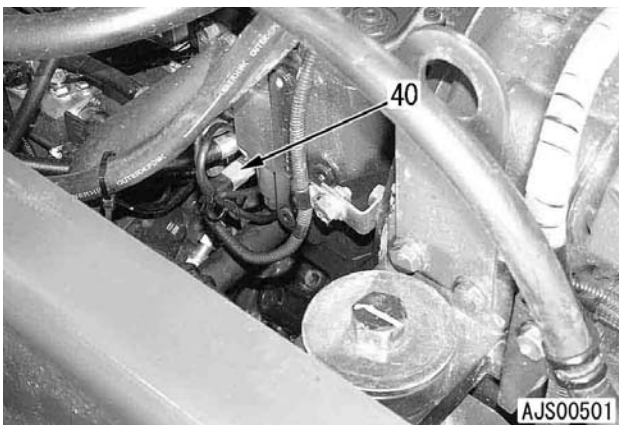

5. Remove the mounting bolts for fuel filter (41).
 - ★ Tie the fuel filter to the engine with a rope or something.
6. Remove bars (42) (43), and cover (44).

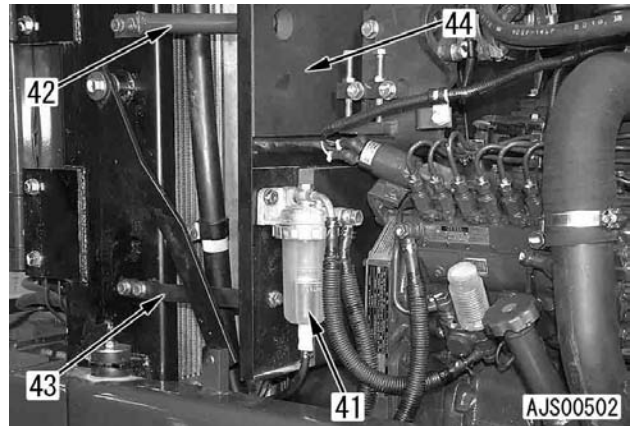

7. Disconnect radiator inlet hose (45) and radiator outlet hose (46).
 - [*3]
8. Disconnect aftercooler upper hose (47).
 - [*4]
9. Disconnect heater hose (48).
 - ★ Disconnect 3 heater hose clamps.

