: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)	
1B	20	ENGINE ROOM MAIN WIRE	
1E	20	INSTRUMENT PANEL WIRE	
1H			
11	20	COWL WIRE	
1J			
3A	- 22		
3B			
3D		INSTRUMENT PANEL WIRE	
3E	22		
3F			
3H			
	CONNECTOR J	OINING WIRE HARNESS AND WIRE HARNESS	

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)			
EB1	34	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO. 2)			
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)			
IE2	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (BEHIND GLOVE BOX)			
IG1	36	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)			
IG3	36	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)			
IJ1	26				
IJ2	36	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)			
IK1	26	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)			
IK2	- 36	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT RICK PANEL)			
IO1	38	ENGINE ROOM MAIN WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)			
BW1	40	ENGINE ROOM MAIN WIRE AND FLOOR NO. 3 WIRE (RIGHT KICK PANEL)			
Bc2	40	FLOOR NO. 3 WIRE AND FLOOR WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)			

: GROUND POINTS

v		
CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	FRONT SIDE OF RIGHT FENDER
EB	34	FRONT SIDE OF LEFT FENDER
ED	34	REAR SIDE OF INTAKE MANIFOLD
IF	36	LEFT KICK PANEL
IJ	36	RIGHT KICK PANEL

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	- 34	ENGINE ROOM MAIN WIRE	123	38	INSTRUMENT PANEL WIRE
Ε7			125	125 126 38	ENGINE ROOM MAIN WIRE
E 9			126		
E10			132	_	ENGINE WIRE
E12			133		
E13			135	38	
E18	- 34	ENGINE WIRE	136	-	
E20			137		
14	38	COWL WIRE	B17	40	FLOOR NO. 3 WIRE
17			B34	40	FLOOR MAIN WIRE
l14			B36	40	FLOOR NO. 3 WIRE
l16	38	INSTRUMENT PANEL WIRE			














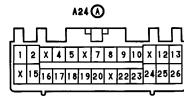

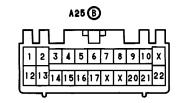

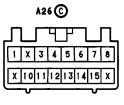

A30, A31 GRAY



ABS AND TRACTION CONTROL

