



DESCRIPTION

Cross-sectional View

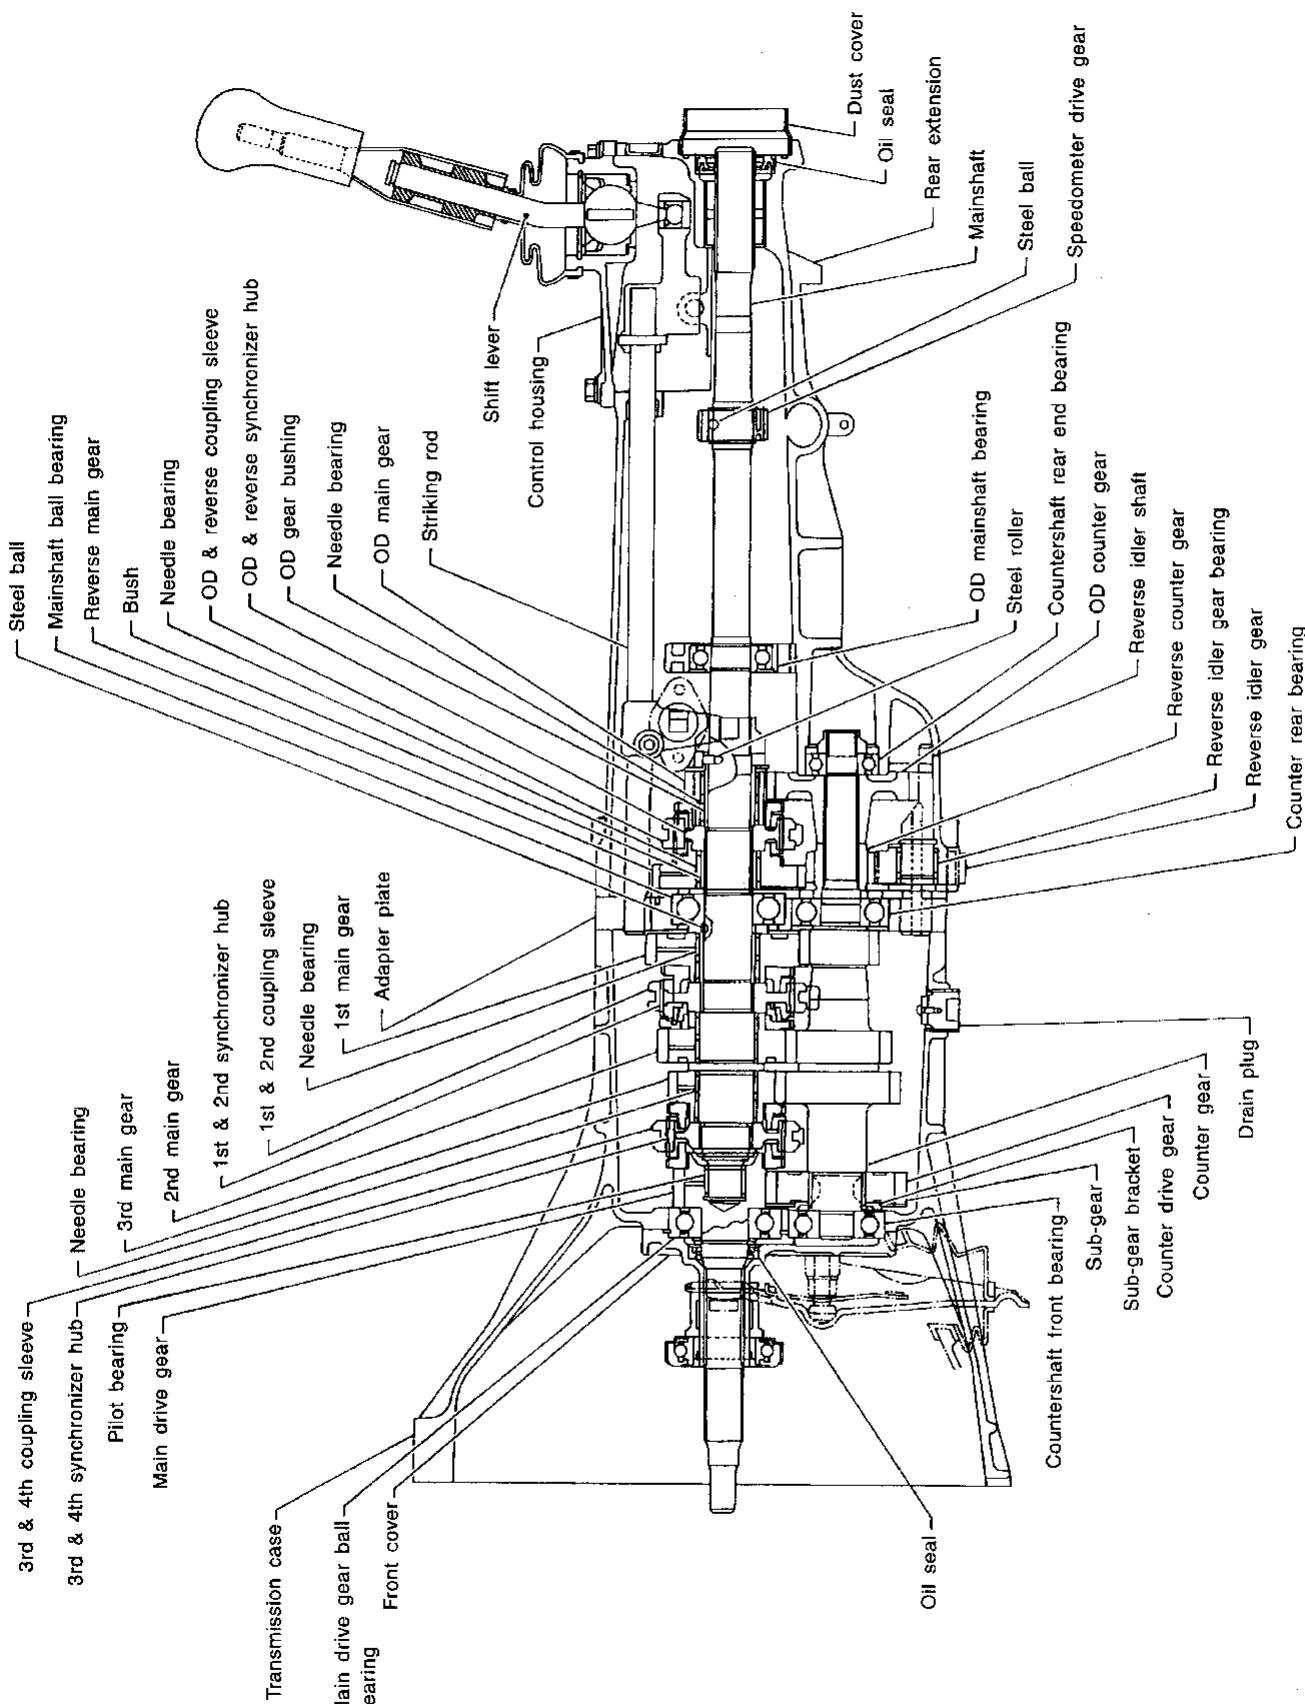

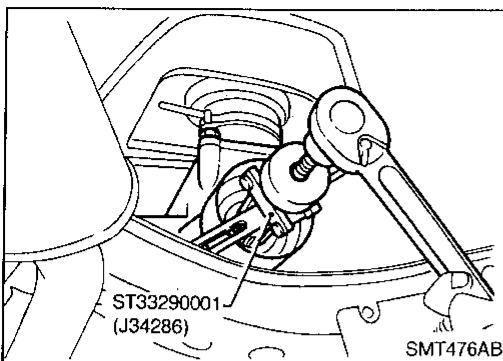

Replacing Rear Oil Seal

REMOVAL

1. Remove propeller shaft. Refer to PD section ("Removal", "PROPELLER SHAFT").
2. Remove rear oil seal.

GI

MA


EM

LC

EC

FE


CL

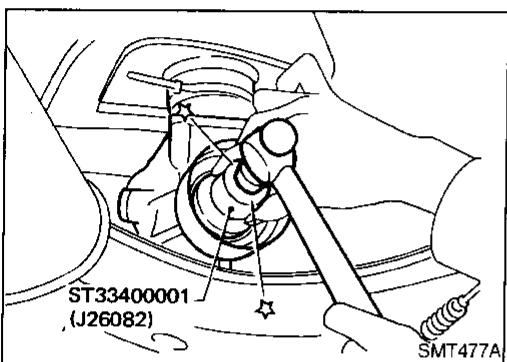

INSTALLATION

1. Install rear oil seal.
2. Install propeller shaft. Refer to PD section ("Installation", "PROPELLER SHAFT").

MT

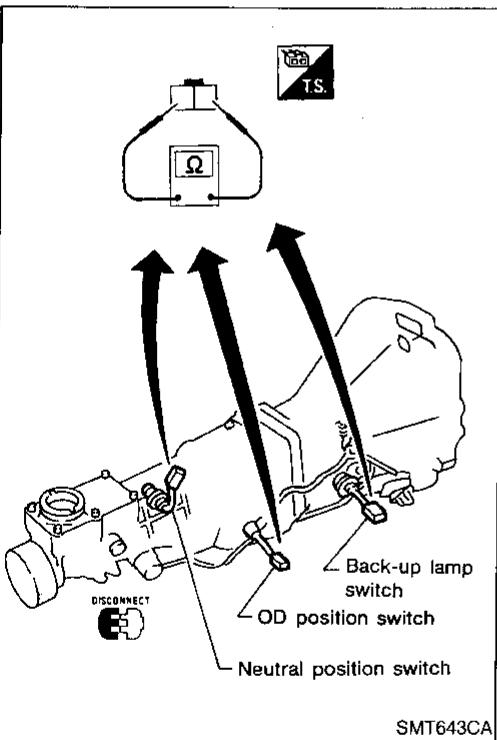

Position Switch Check

Switch	Gear position	Continuity
Back-up lamp switch	Reverse	Yes
	Except reverse	No
Neutral position switch	Neutral	Yes
	Except neutral	No
OD position switch	OD	Yes
	Except OD	No

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX