

CONTENTS

RS6F51R

PRECAUTIONS	3
Caution	3
PREPARATION	4
Special Service Tools	4
Commercial Service Tools	6
NOISE, VIBRATION AND HARSHNESS (NVH)	
TROUBLESHOOTING	7
NVH Troubleshooting Chart	7
MANUAL TRANSAXLE	7
DESCRIPTION	8
Cross-Sectional View	8
DOUBLE-CONE SYNCHRONIZER	9
REVERSE GEAR NOISE PREVENTION FUNCTION (SYNCHRONIZING METHOD)	9
M/T OIL	10
Changing M/T Oil	10
DRAINING	10
FILLING	10
Checking M/T Oil	10
OIL LEAKAGE AND OIL LEVEL	10
SIDE OIL SEAL	11
Removal and Installation	11
REMOVAL	11
INSTALLATION	11
POSITION SWITCH	12
Checking	12
BACK-UP LAMP SWITCH	12
NEUTRAL POSITION SWITCH	12
CONTROL LINKAGE	13
Removal and Installation of Control Device and Cable	13
AIR BREATHER HOSE	14
Removal and Installation	14
TRANSAXLE ASSEMBLY	15
Removal and Installation	15
REMOVAL	15
INSTALLATION	16
Component Parts	17
CASE AND HOUSING COMPONENTS	17

GEAR COMPONENTS	18
SHIFT CONTROL COMPONENTS	20
FINAL DRIVE COMPONENTS	21
Disassembly and Assembly	21
DISASSEMBLY	21
ASSEMBLY	25
Adjustment	32
INPUTSHAFT END PLAY	32
DIFFERENTIAL SIDE BEARING PRELOAD	33
MAINSHAFT END PLAY	34
REVERSE IDLER GEAR END PLAY	35
INPUT SHAFT AND GEARS	37
Assembly and Disassembly	37
DISASSEMBLY	37
INSPECTION AFTER DISASSEMBLY	38
ASSEMBLY	39
MAINSHAFT AND GEARS	44
Assembly and Disassembly	44
DISASSEMBLY	44
INSPECTION AFTER DISASSEMBLY	45
ASSEMBLY	47
REVERSE IDLER SHAFT AND GEARS	53
Assembly and Disassembly	53
DISASSEMBLY	53
INSPECTION AFTER DISASSEMBLY	53
ASSEMBLY	54
FINAL DRIVE	55
Assembly and Disassembly	55
PRE-INSPECTION	55
DISASSEMBLY	55
INSPECTION AFTER DISASSEMBLY	56
ASSEMBLY	56
SHIFT CONTROL	59
Inspection	59
SHIFT FORK	59
SERVICE DATA AND SPECIFICATIONS (SDS)	60
General Specifications	60
TRANSAXLE	60
FINAL GEAR	60
Gear End Play	61

Clearance Between Baulk Ring and Gear	61	MAINSHAFT ADJUSTING SHIM	63
3RD, 4TH, 5TH, 6TH & REVERSE BAULK RING..	61	INPUT SHAFT REAR BEARING ADJUSTING	
1ST AND 2ND DOUBLE BAULK RING	61	SHIM	63
Available Snap Rings	61	MAINSHAFT REAR BEARING ADJUSTING	
6TH BUSHING	61	SHIM	63
Available C-rings	62	REVERSE IDLER GEAR ADJUSTING SHIM	63
MAINSHAFT C-RING	62	6TH MAIN GEAR ADJUSTING SHIM	64
Available Thrust Washer	62	Available Shims	64
INPUT SHAFT THRUST WASHER	62	BEARING PRELOAD	64
DIFFERENTIALSIDEGEARTHRUSTWASHER		DIFFERENTIAL SIDE BEARING ADJUSTING	
... 62		SHIM (S)	64
Available Adjusting Shims	63		