


FWD Axle Serial Number

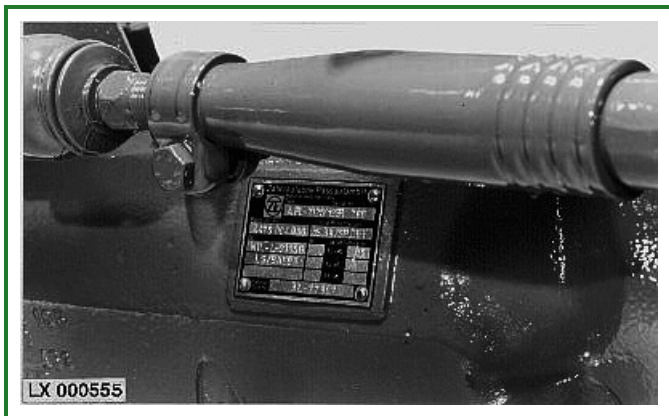

LX000555-UN: FWD axle serial number

The plate bearing the FWD axle serial number is located on the r.h. end of the axle, at the rear. Information provided on it includes the transmission ratio of the front axle. This information will be required if the type of tires used at the front is to be changed.

-: FWD axle serial number



AG,OU12401,155-19-23MAR00

Section IBC: John Deere Service Keeps You On The Job

John Deere Parts

The Right Tools

Well-Trained Technicians

Prompt Service