



## Cleaning the Cab Air Filters

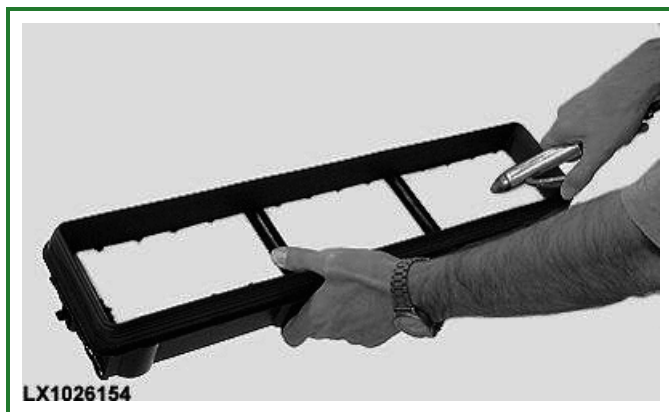

LX1026154-UN: Cleaning the cab air filters

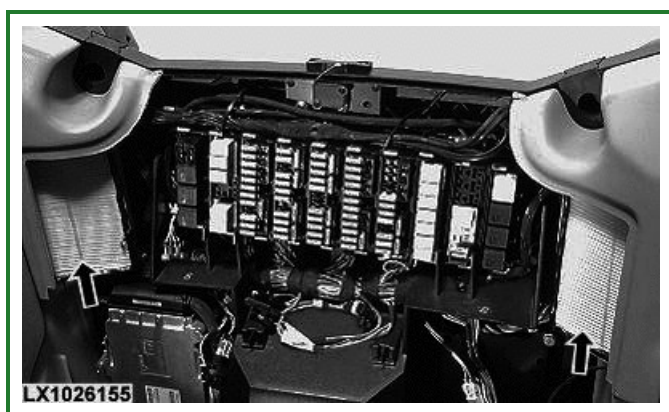


LX1026155-UN: Recirculated air filter

Every time the primary filter is serviced, also remove the two cab air filters and the recirculated air filters, and clean them with compressed air directed from the clean side.

Replace cab air filters together with engine primary air filter element.

OU12401,0000938-19-01MAY01

## Keeping the Radiator Screen Clean

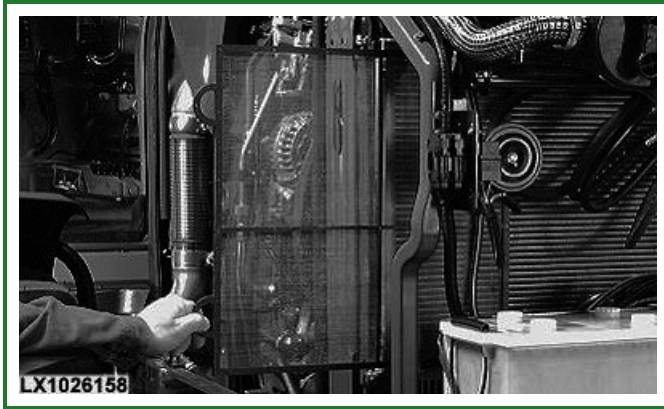

**LX1026158-UN: Keep the radiator screen clean**

For efficient cooling, the radiator screen must be kept clean.

Pull the screen (if equipped) out to the side. Remove any dust or oil and carefully straighten any bent fins.

OU12401,000093B-19-01MAY01