


Engine Serial Number

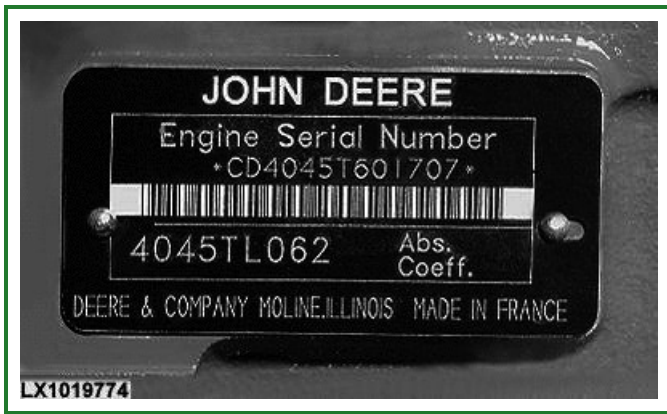


LX1019774-UN: Engine serial number

The engine serial number plate is located on the right-hand side of engine block.

NOTE:

Besides the engine serial number, the plate shows the engine type as well. When ordering spare parts for the engine, please quote all the numbers and letters on this type plate.

-: Engine serial number

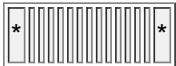


-: Engine serial number



OU12401,00101C6-19-19NOV00


Transmission Serial Number

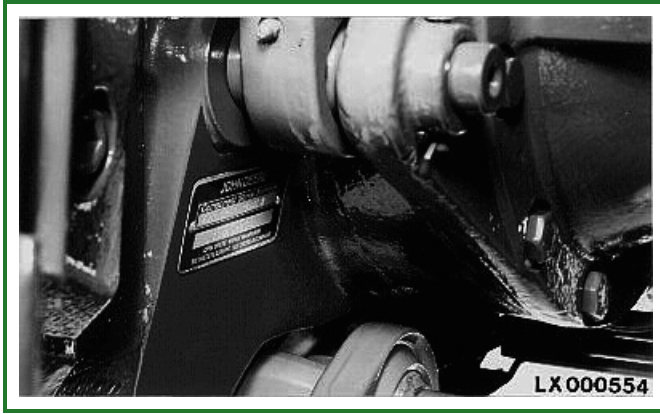

LX000554-UN: Transmission serial number

The transmission serial number plate is located on the right-hand side of differential housing. It provides details of the gear pair in the differential (e.g. 53/10) and the transmission ratio of the front-wheel drive axle (e.g. 1,712). This information will be required if the type of tires is to be changed.

-: Transmission serial number

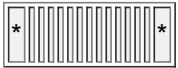

AG,OU12401,285-19-09APR00