


Record Engine Serial Number

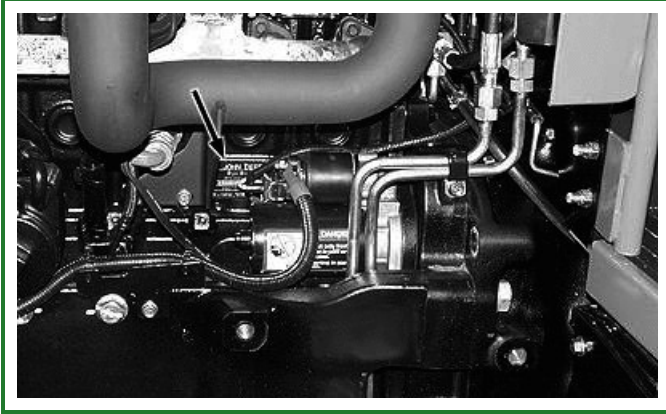

LV09182-UN: Model 5225 and 5325



LV09183-UN: Model 5425, 5525 and 5625

Model 5225 and 5325: Serial number plate is located on left side of engine block near starter solenoid.


Model 5425, 5525 and 5625: Serial number plate is located on right side of engine block between fuel and oil filters.

-: Engine Serial Number

Engine Serial Number

OUMX005,00018D8-19-20060915

Record Transmission Serial Number

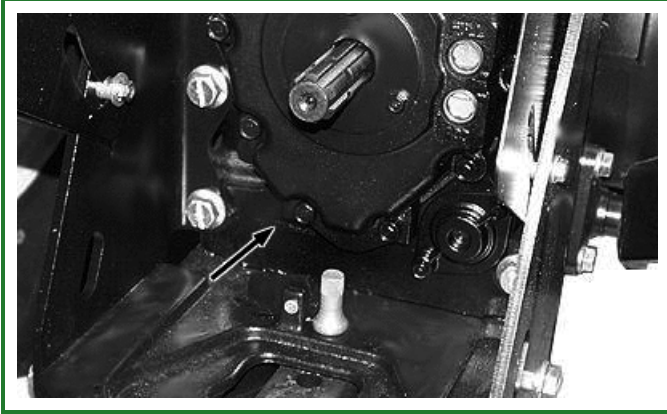

LV09184-UN: Transmission Serial Number

Serial number is stamped into lower left corner of rear housing.

-: Transmission Serial Number

Transmission Serial Number

OUMX005,00018D9-19-20040719