

Replace Brake or Turn Signal Light Bulb



RXA0137101-UN: Remove Light Assembly



RXA0137102-UN: Remove Light Bulb

LEGEND:

A - Screws

B - Light Bulb


1. Remove screws (A) and take out light assembly.
2. Turn bulb (B) counterclockwise 1/4 turn and pull out to remove.
3. Install new bulb in fixture and turn 1/4 turn clockwise.
4. Reinstall assembly and screws.

SV81855,00001FF-19-20140403

Replace Dome Light Bulb



RXA0099130-UN: Remove Cover

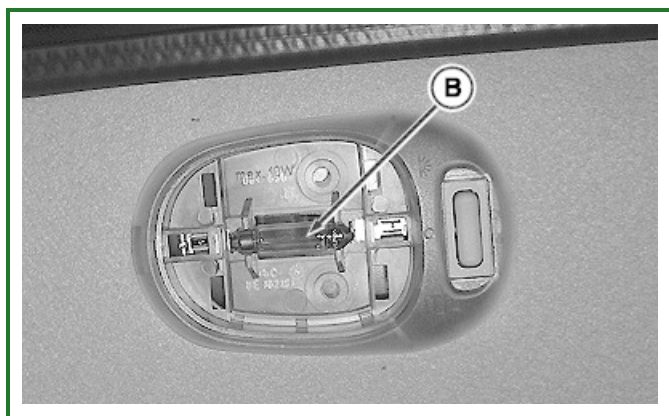

RXA0099128-UN: Remove And Replace Bulb

LEGEND:

A - Cover

B - Light Bulb

1. Remove lens cover (A).
2. To remove light bulb (B), grasp firmly and pull straight down.
3. Gently push new bulb into fixture until it seats.
4. Reinstall cover.

SV81855,0000200-19-20140303