



Replace Implement Power Relay Module Fuses

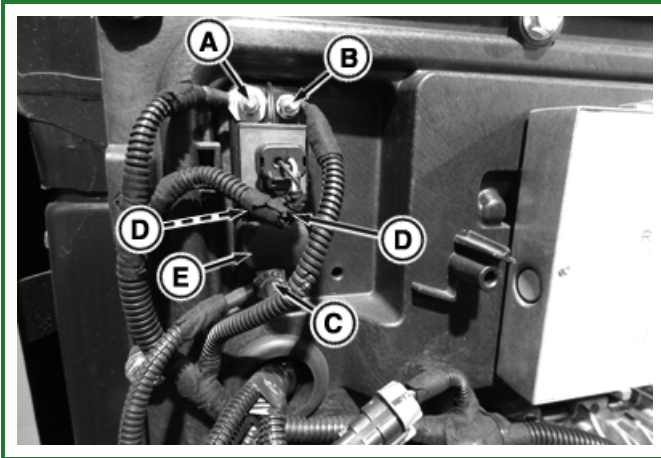

RXA0142135-UN: Implement Power Relay Module

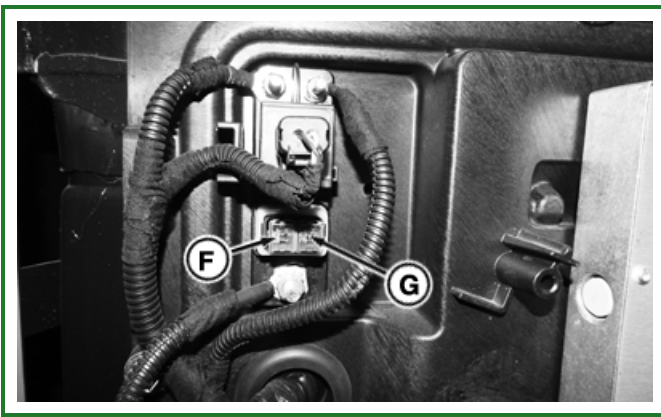

RXA0142136-UN: Remove Cover To Access Implement Power Relay Module

LEGEND:

- A - Switched Power Lug
- B - Unswitched Power Lug
- C - Input Stud
- D - Fuse Cover Tabs
- E - Fuse Cover
- F - 60 Amp Fuse
- G - 30 Amp Fuse

IMPORTANT:

Replacement fuse must be same rating as original.

Remove cab back panel. In upper left-hand corner is a relay module to route power to implement CAN Bus Breakaway Connector.

Top left-hand module stud is switched power lug (A) protected by a 60 amp fuse (F). Top right-hand module stud is unswitched power lug (B) protected by a 30 amp fuse (G).

Bottom center is the battery power input stud (C).

To Change Fuses

1. Press down on fuse cover tabs (D) and remove fuse cover (E).
2. To remove, pull fuse straight back.

3. Insert new fuse.

4. Replace cover and slide tabs over cover edge to hold in place.

TO84419,00001DA-19-20150116