

Checking Neutral Start System

⚠ CAUTION:

Avoid possible injury or death. DO NOT attempt to start machine unless you are sitting in operator's seat with the clutch switch depressed. DO NOT bypass or disable any of the starting system parts.

Set park brake before attempting to start engine.



T7826AL-UN: FNR Range Lever

This machine has a neutral start switch that is activated by the FNR range lever (A).

Check the neutral start system to ENSURE that the machine:

- WILL start with the FNR range lever in neutral "N" position.
- WILL NOT start with FNR range lever in any other position.

If starting system fails to operate correctly, have your authorized dealer repair the system immediately.

TX,90,RR2622-19-1993/03/15

Adding Attachments/Accessories to Roll-Over Protective Structure (ROPS)

Do not add attachments or accessories to the ROPS without contacting your authorized dealer for information. Improper attachment may impair the protection offered by the ROPS.

045,90,K117-19-1994/06/08