


Replace Primary Fuel Filter (Water Separator)

1.



T102466-UN: Replace Primary Fuel Filter (Water Separator)

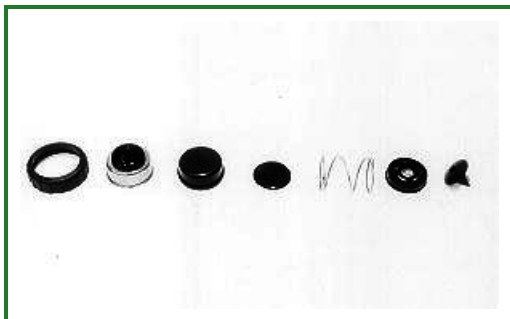


T8387AE-UN: Hand Primer Assembly

Turn retaining ring (A) counterclockwise to remove filter (B). Allow sediment to drain into a container. Dispose of waste properly.

2. Turn sediment bowl (C) counterclockwise to remove from filter assembly. Clean bowl.
3. Remove hand primer from fuel filter base. Disassemble hand primer assembly.

4.

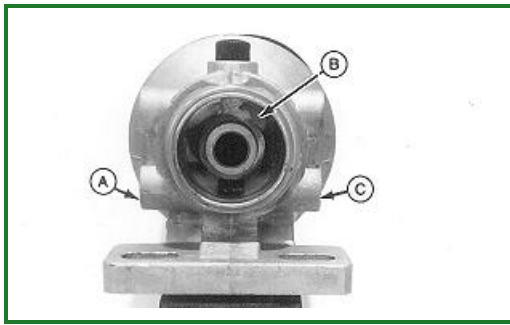

T8387AD-UN: Filter Base

LEGEND:

A - Fuel Inlet Line

B - Filter Base

C - Plug

Remove fuel inlet line (A) and plug (C).

5. Flush any debris from filter base (B).
6. Install fuel inlet plug and fuel inlet line.
7. Assemble primer assembly and install onto fuel filter base.
8. Install new filter. (Follow instructions on filter.)
9. Install sediment bowl.
10. Bleed fuel system. (See Bleeding Fuel System in Maintenance chapter.)

TX,80,DH5123-19-1996/07/26