


Replace Air Cleaner Elements

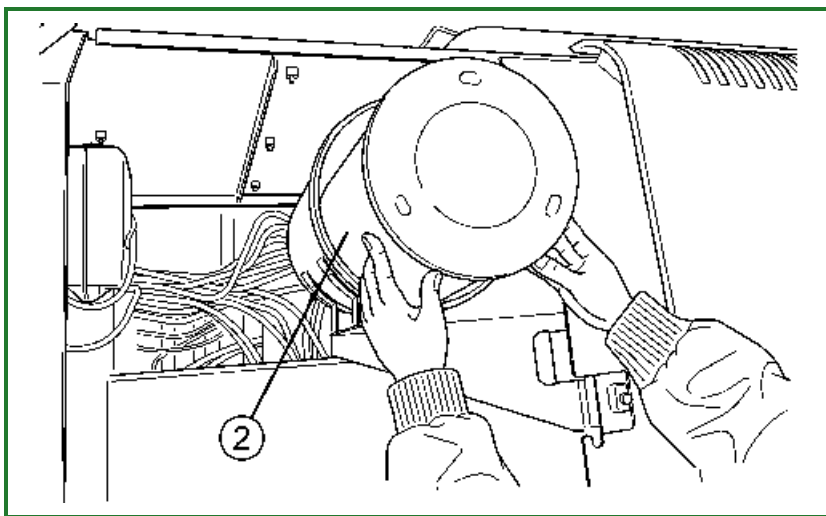

T147443C-UN: Air Cleaner Element



T136465-UN: Replace Air Cleaner Elements

LEGEND:

1 - Clamps

2 - Primary Element


1. Loosen clamps (1) to remove cover.
2. Remove primary element (2).
3. Remove secondary element.
4. Clean the inside of filter canister.
5. Install elements, making sure the secondary element is centered in canister.
6. Install cover, tighten clamps.

TX14740,0001CB4-19-20020215

Replace Air Cleaner Dust Valve

NOTE:

A missing, damaged, or hardened dust valve will cause the air filter elements to be ineffective.

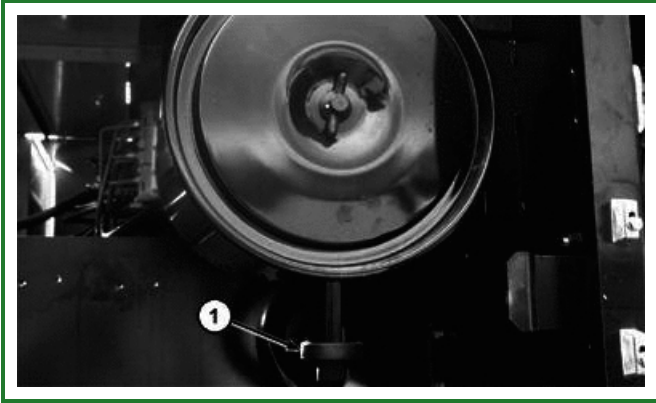

T147443B-UN: Air Cleaner Dust Valve

LEGEND:

1 - Air Cleaner Dust Valve

Replace dust valve (1).

TX14740,0001CB5-19-20020215