


Adjusting Bucket to Arm Joint

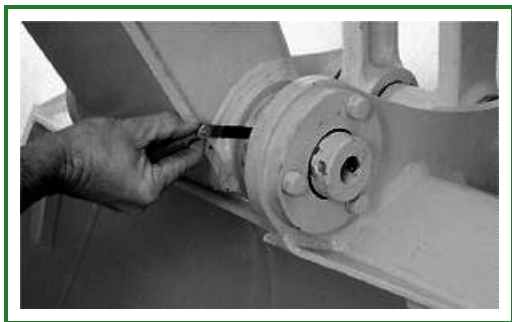


T95775-UN: Bucket Linkage

Your machine has a bucket adjustment system to take up play. When play increases, remove shims as follows:

1. Slide O-ring out of way.

2.

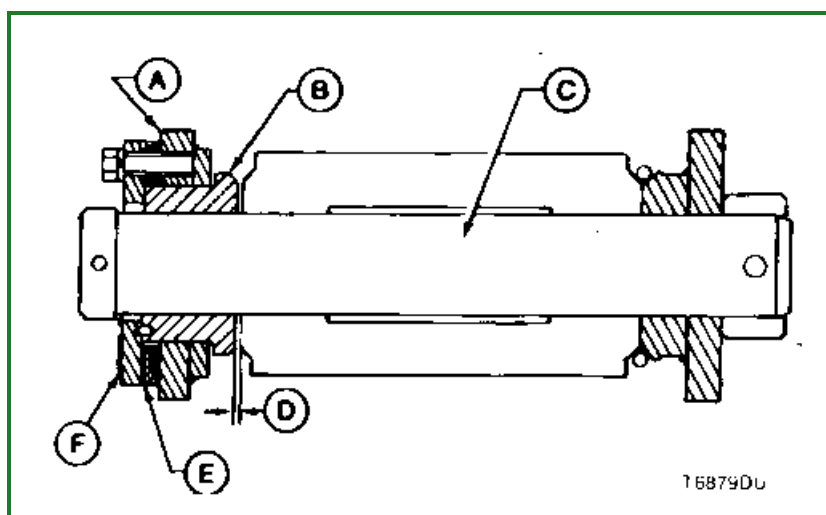

T6879DU-UN: Bucket Linkage

LEGEND:


- A - Bucket
- B - Bushing
- C - Pin
- D - Clearance
- E - Shim
- F - Plate

Measure distance (D) between the bushing (B) and the arm. This distance should not be adjusted below 0.5 mm (0.020 in.).

3. Remove plate (F).

4. **NOTE:**

Alternate buckets may have different adjustment procedures.

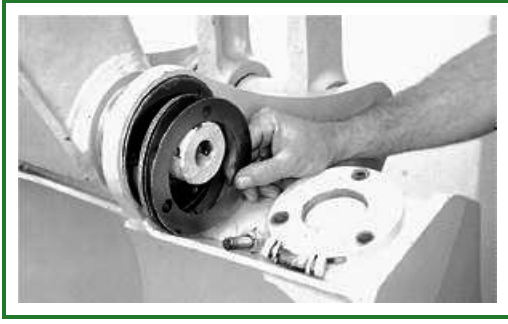

T95788-UN: Bucket Linkage

Remove shim(s) according to distance measured. This will allow the bushing to move to the right and take up the excessive play.

5. Install plate and tighten cap screws.
6. Slide O-ring back into position.

04T,90,M210-19-20070703