


Checking Tandem Oil Level

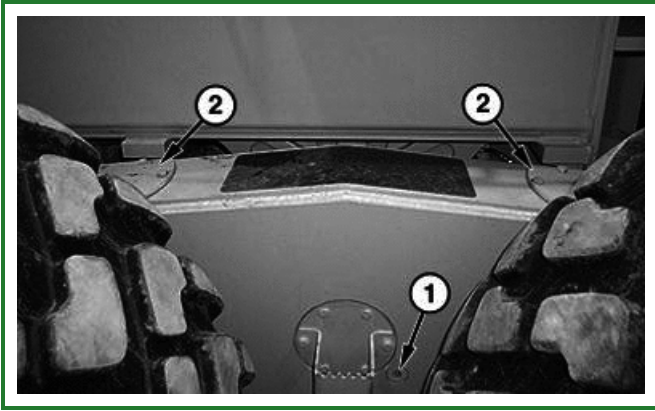

T204797A-UN: Two Points

LEGEND:

1 - Oil Level Plug

2 - Inspection Plate

1. Park machine on a level surface.
2. Lower all equipment to the ground.
3. Stop the engine.
4. Remove oil level plug (1). Oil must be level with the bottom of the hole.
5. Thoroughly clean area around one of the inspection plates (2). Remove inspection plate and add oil if necessary. (See Section 3-1.)
6. Install inspection plate and oil level plug.
7. Turn cap (3) on top of breather tube to make sure cap moves freely. A plugged breather tube may cause leakage.

NOTE:

Breather tube is at front of each tandem.

OOU1032,0001558-19-20081126

Replacing Transmission Oil Filter



T206406A-UN: Transmission Oil Filter

LEGEND:

1 - Transmission Oil Filter

1. Lower all equipment to the ground.
2. Stop the engine.
3. Turn filter (1) counterclockwise to remove.
4. Clean the mounting surface.
5. Apply thin film of oil to gasket of new filter.
6. Install new filter. Turn filter clockwise by hand until gasket touches mounting surface.
7. Tighten 1/2—3/4 turn more.
8. Add approximately 1.9 L (2 qt) oil to filter. (See Section 3-1.)
9. Start engine and run for 2 minutes.
10. Stop engine. Check for leaks around filter. Tighten filter only enough to stop leaks.
11. Check oil level and add oil if necessary.

OOU1032,00015D9-19-20041220