



**TX1014241A-UN: Cover**



**TX1024511A-UN: JDLink In-line Fuse**

**LEGEND:**

- 1 - JDLink™ Unswitched Power In-Line Fuse
- 2 - Cap Screws (3 used)
- 3 - JDLink™ Ground In-Line Fuse (7.5 Amp)
- 4 - JDLink™ Switched Power In-Line Fuse (3 Amp)

1. Turn machine off.
2. Open battery compartment access door.
3. Remove cap screws (2) from cover to access the 7.5 Amp JDLink™ unswitched power in-line fuse (1) on the yellow wire.
4. To deactivate the JDLink™ Machine Monitoring System, remove the unswitched power in-line fuse.
5. Install cover and cap screws.
6. Close access door.

## Replacing Bucket Teeth

### CAUTION:

*Guard against injury from flying pieces of metal; wear goggles or safety glasses.*

#### IMPORTANT:

Angle the drift toward the bucket to avoid damaging the rubber pin lock.

1.



#### **T95784-UN: Bucket Teeth**

Use a hammer and drift to drive out locking pin.

2.

#### *NOTE:*

*Alternate buckets may use different tooth assemblies.*

Remove tooth.

3.



#### **T95785-UN: Rubber Pin Lock**

#### **LEGEND:**

A - Rubber Pin Lock

Inspect rubber pin lock (A) for damage. Replace if necessary.

4. If rubber pin lock has moved, reposition in slot in adapter tooth shank.