

## Replacing Bucket Teeth



T95784-UN: Bucket Teeth



T95785-UN: Rubber Pin Lock



T95786-UN: Tooth Shank

**LEGEND:**

A - Rubber Pin Lock

**⚠ CAUTION:**

*Guard against injury from flying pieces of metal; wear goggles or safety glasses.*

**IMPORTANT:**

Angle the drift toward the bucket to avoid damaging the rubber pin lock.

Check bucket teeth periodically so that wear does not extend to the bucket tooth shank.

1. Use a hammer and drift to drive out locking pin.

2.

**NOTE:**

*Alternate buckets may use different tooth assemblies.*

Remove tooth.

3. Inspect rubber pin lock (A) for damage. Replace if necessary.
4. If rubber pin lock has moved, reposition in slot in adapter tooth shank.
5. Position the new tooth over the tooth shank.
6. Drive the locking pin into the hole fully.

04T,90,M16-19-20160105