


Replace Cab Fresh Air and Recirculating Air Filters

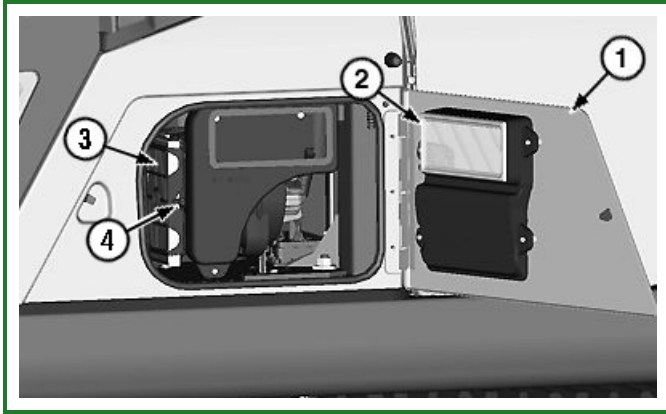

YN1124204-UN: Access to Cab Fresh Air and Cab Recirculating Air Filters

LEGEND:

- 1 - Cab Filter Access Door
- 2 - Cab Fresh Air Filter
- 3 - Cab Recirculating Air Filter
- 4 - Tab

Replacing Cab Fresh Air Filter:


1. Park the machine on level surface.
2. Stop engine.
3. Unlock cab filter access door (1) on left side of machine with key to access cab fresh air filter (2).
4. Remove cab fresh air filter.
5. Install the new cab fresh air filter.

Replacing Cab Recirculating Air Filter:

1. Squeeze tab (4) on side of cab recirculating air filter (3) to remove.
2. Install the new cab recirculating air filter.
3. Lock cab filter access door.

CP00612,0000957-19-20130307

Replace Engine Air Filters and Dust Unloader Valve

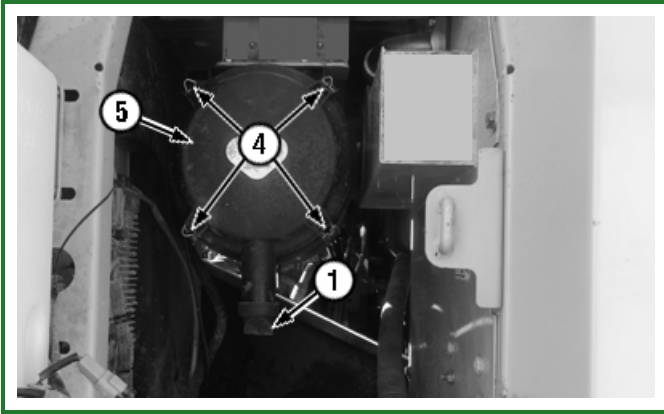

YN1125677-UN: Engine Air Filter



TX1090640-UN: Primary Element



TX1090641-UN: Secondary Element

LEGEND:

- 1 - Dust Unloader Valve
- 2 - Primary Element
- 3 - Secondary Element
- 4 - Tab (4 used)
- 5 - Cover

Replacing Engine Air Filters

IMPORTANT:

Replace engine air filters at monitor indication or 1000 hours, whichever occurs first. Damaged or dirty elements can cause engine damage. DO NOT clean elements.