
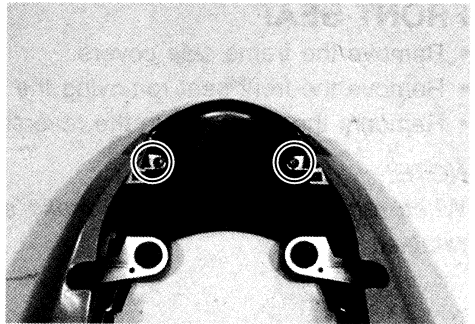
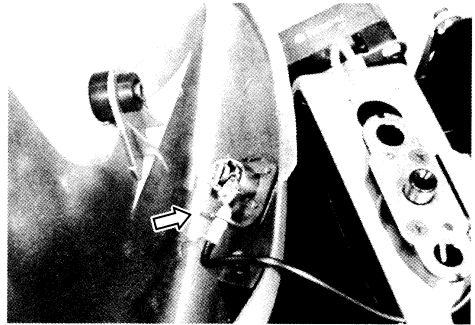


SEAT TAIL COVER

- Remove the rear seat, the frame side covers and the front seat.
- Disconnect the seat lock cable.
- Remove the screws.


NOTE:

- * *Not to expand the right and left seat tail covers larger than required to remove.*
- * *Place the rags on the seat tail cover to prevent scratching the paint surface of the seat tail cover.*

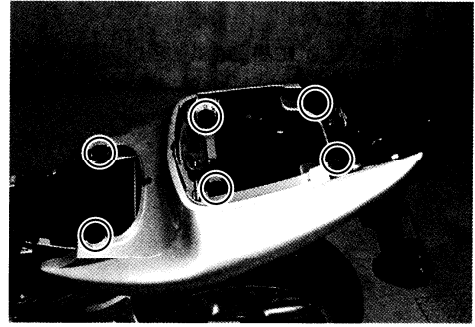

- Remount the seat tail cover in the reverse order of removal.

FRONT WHEEL CONSTRUCTION

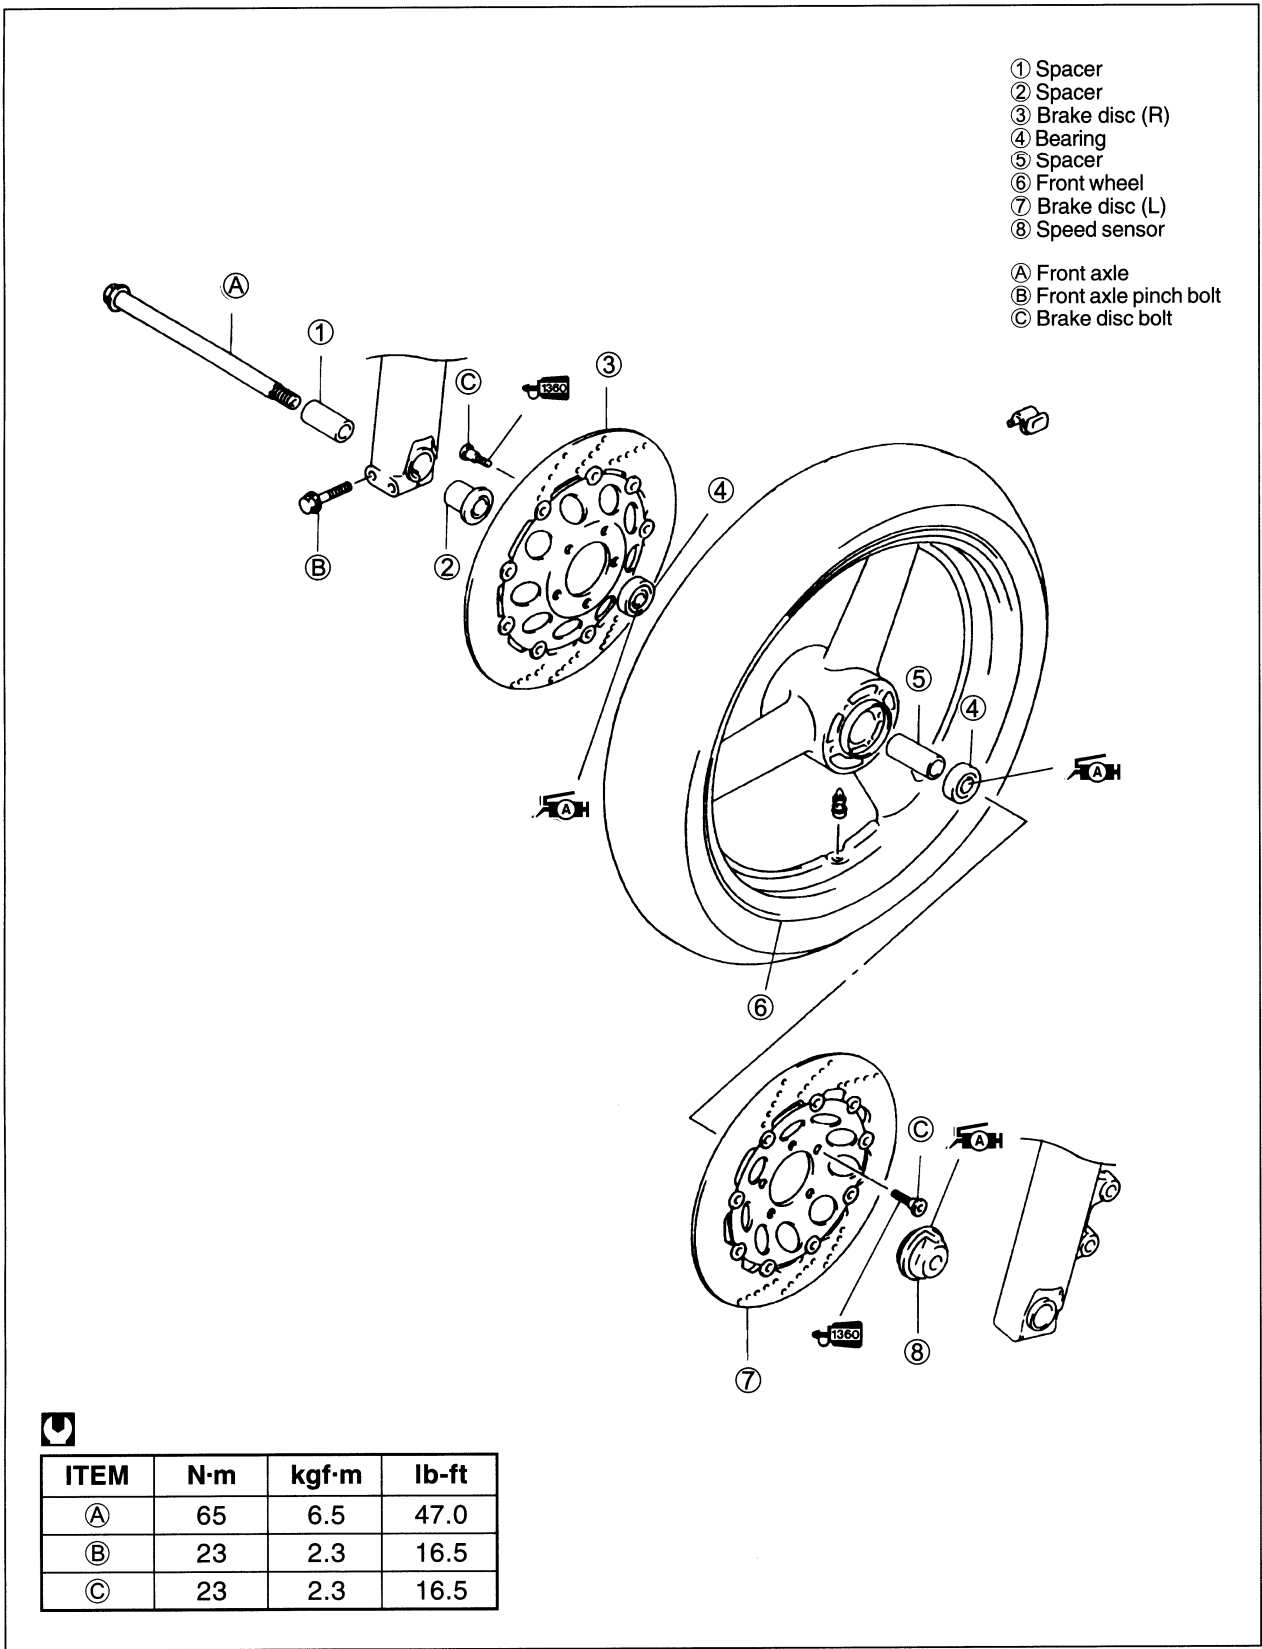

ITEM	N-m	kgf-m	lb-ft
A	65	6.5	47.0
B	23	2.3	16.5
C	23	2.3	16.5