


Positioning Cylinder Remove and Install—If Equipped

1.

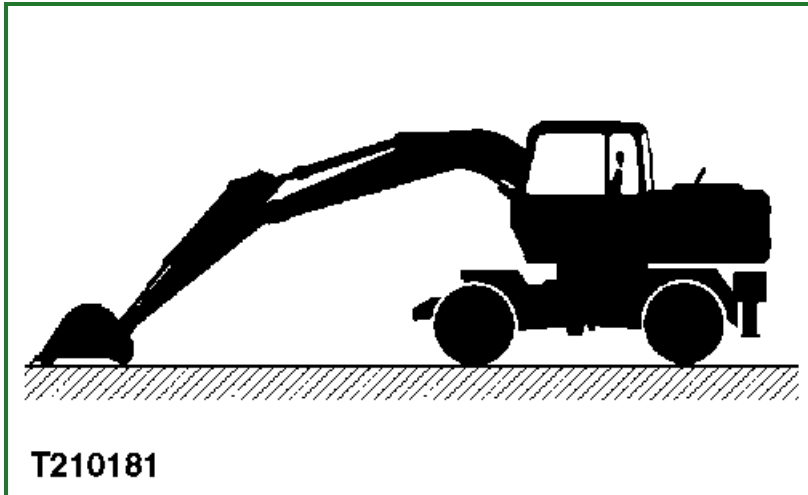

T210181-UN: Extended Front Attachment

Park machine on firm, level surface.


2. Retract arm and bucket cylinders and lower bucket to ground.
3. Stop engine.

CAUTION:

To avoid injury from escaping fluid under pressure, stop engine and relieve the pressure in the system before disconnecting or connecting hydraulic or other lines. Tighten all connections before applying pressure.

4.

CAUTION:

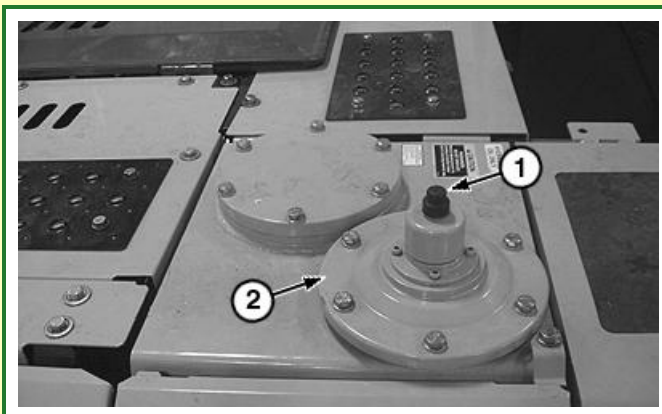

TX1031751A-UN: Hydraulic Tank Pressure Release Button

LEGEND:


- 1 - Pressure Release Button
- 2 - Hydraulic Oil Tank Cover

High pressure release of oil from pressurized system can cause serious burns or penetrating injury. The hydraulic tank is pressurized. Relieve pressure by pushing pressure release button.

Push pressure release button (1).

5. Loosen position cylinder hydraulic lines to release any residual pressure.

6.

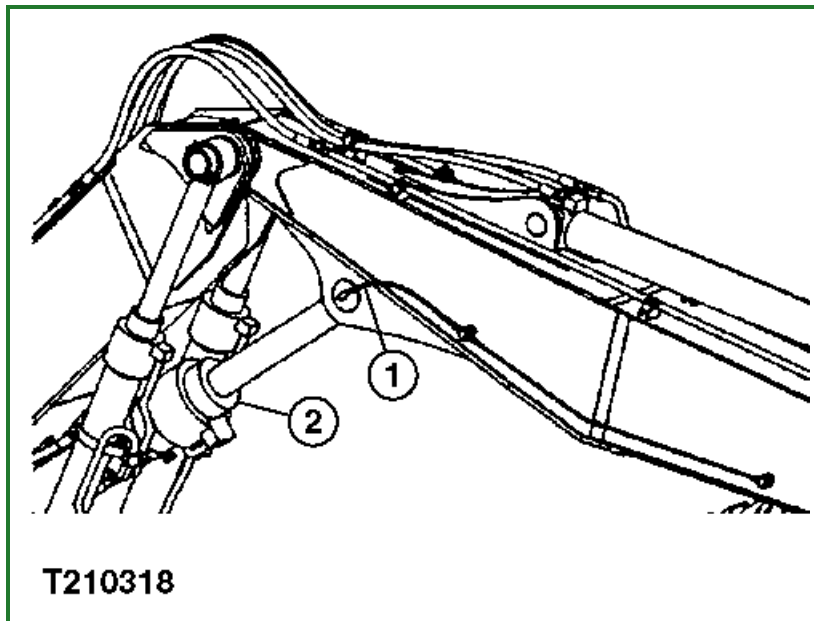

T210318-UN: Position Cylinder Lube Line

LEGEND:

1 - Lubrication Line

2 - Position Cylinder

Disconnect lubrication line (1).

7.

CAUTION:

Prevent possible injury from crushing. Heavy component, use appropriate lifting device.