


- 9 - Hose Guard
- 10 - Hose Guard
- 11 - Cap Screw (8 used)
- 12 - Panel
- 13 - Cap Screw (4 used)
- 14 - Cap Screw (2 used)

1. Lower all equipment to the ground. Operate hydraulic controls to relieve pressure in the system.
2. Remove side shields and hood. See [Hood Support and Engine Side Shields Remove and Install](#) (Group 1910.) See [Hood Remove and Install](#) . (Group 1910.)

3.

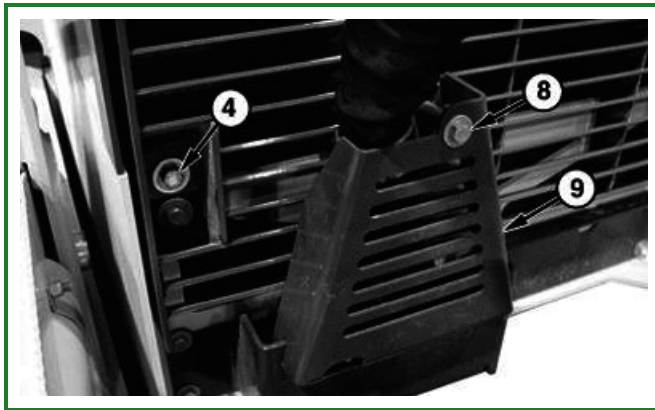

**TX1018432A-UN: Grille and Hose Clamp**

**LEGEND:**

- 4 - Cap Screw (4 used)
- 8 - Cap Screw
- 9 - Hose Guard

Remove cap screw (8) and remove hose guard (9).

**NOTE:**

*Cable clamp may have to be loosened to aid in removal of hose guard.*

4.

**⚠ CAUTION:**

**Prevent possible crushing injury from heavy component. Use an appropriate lifting device.**

Item	Measurement	Specification
Grille Weight (approximate)		43 kg 95 lb

Connect grille to hoist. Remove lower and upper cap screws (4) and remove grille.

5.



**TX1018433A-UN: Light Panel and Horn**

**LEGEND:**

- 5 - Light Panel
- 14 - Cap Screw (2 used)
- 15 - Horn

Remove cap screws (14), disconnect light connectors and remove light panel (5).

6. Disconnect horn (15) and remove.

7.



**TX1018434A-UN: Grille Housing Cap Screws and Rubber Mounts**

**LEGEND:**

- 16 - Cap Screws (5 used)

Remove three cap screws (16).

8.

**⚠ CAUTION:**

*Prevent possible crushing injury from heavy component. Use an appropriate lifting device.*

Item	Measurement	Specification
<b>Grille Housing Weight (approximate)</b>	<b>70 kg</b>	<b>155 lb</b>

Install lifting straps and a hoist.