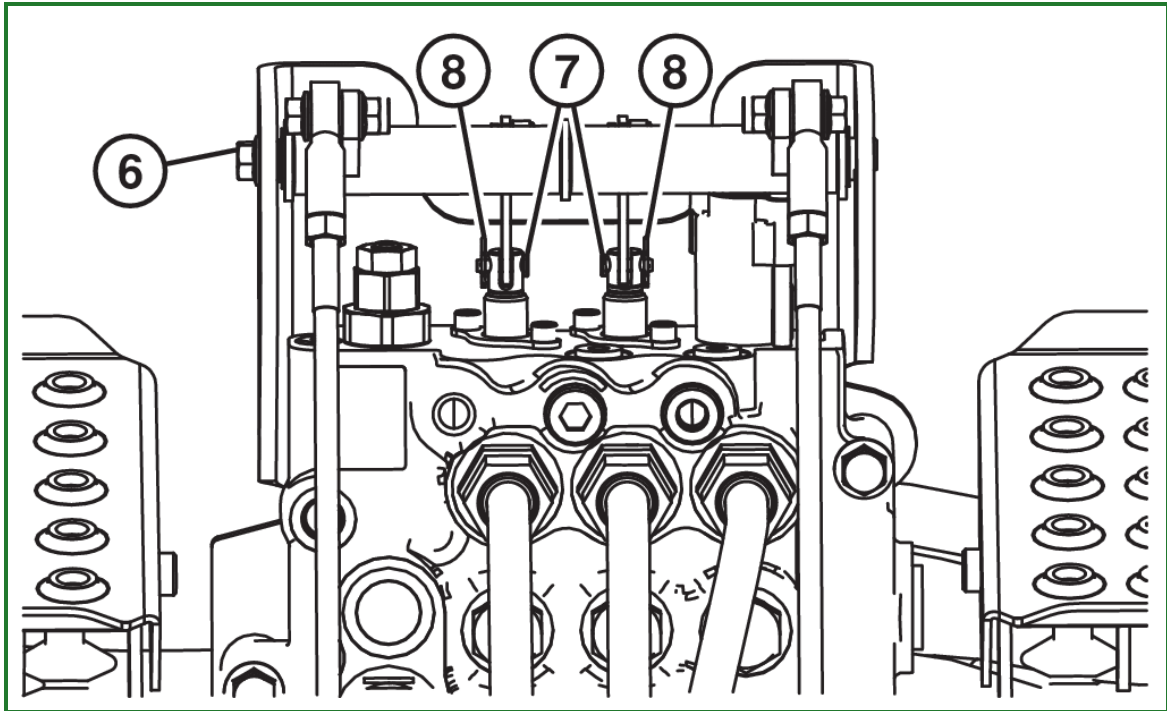


6.

**TX1068958-UN: Control Valve****LEGEND:**

6 - Cap Screw

7 - Pin (2 used)

8 - Cotter Pin (2 used)

Remove cap screw (6) from valve mount bracket, and cotter pins (8) and pins (7) from control valve spools.

7. Remove pedal assembly from machine.
8. Clean and inspect parts. Repair or replace parts as necessary. [See Pedal Assembly Disassemble and Assemble](#) . (Group 3115.)
9. Install pedal assembly to control valve and mounting bracket.
10. Install pedal assembly to machine.
11. Install footwell. [See Footwell Removal](#) . (Operator's Manual.)
12. Lower operator's station.
13. Release boom lock and lower boom to ground.


Go to [Section_31:Group_3115](#)

BS40810,00002E4-19-20180619

Pedal Assembly Remove and Install

1. Park machine on level surface.
2. Raise boom and engage boom lock.
3. Raise operator's station.
4. Remove footwell. [See Footwell Removal](#) . (Operator's Manual.)

5.

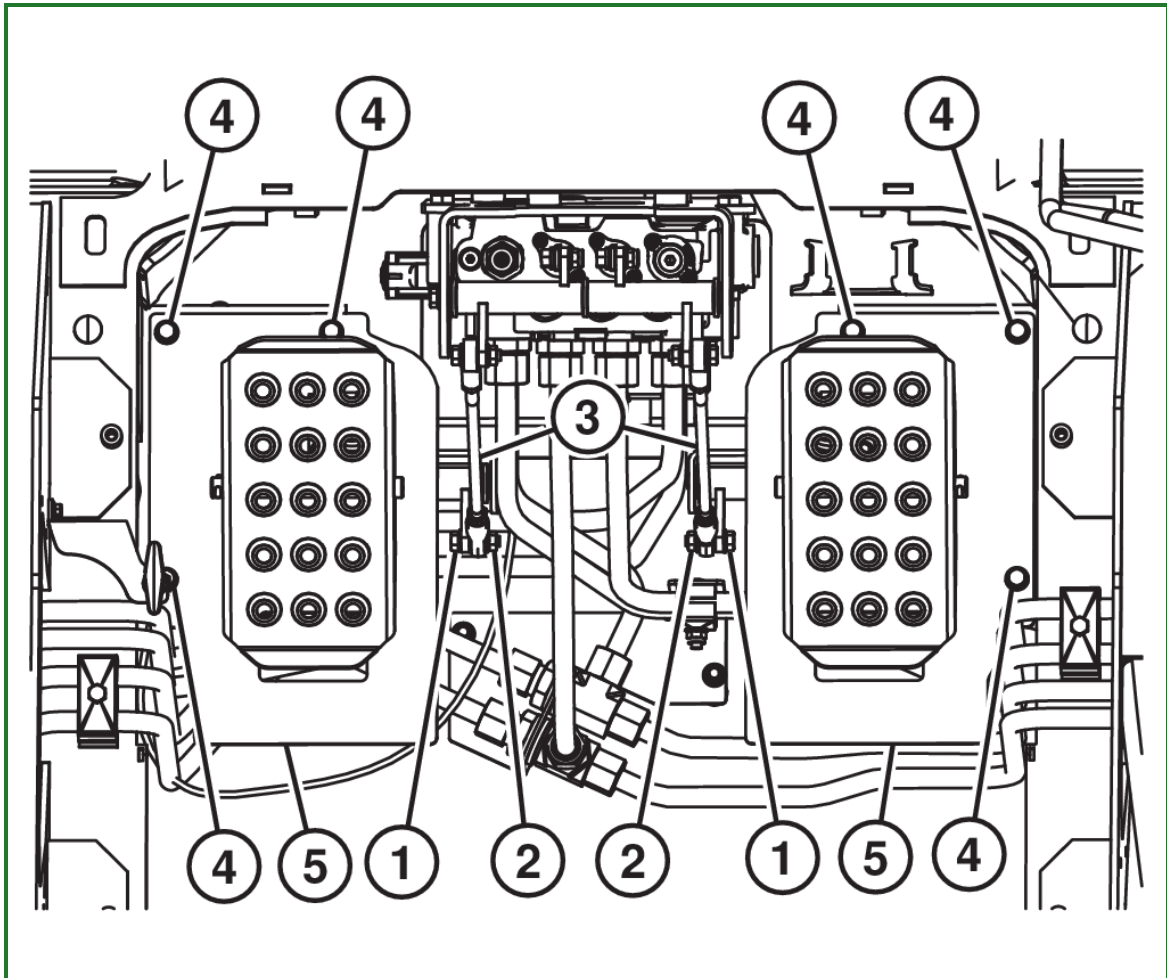

TX1068863-UN: Pedal Assembly

LEGEND:

- 1 - Cap Screw (2 used)
- 2 - Nut (2 used)
- 3 - Linkage Rod
- 4 - Cap Screw (6 used)
- 5 - Pedal (2 used)

Remove cap screws (4) from pedals (5).