


Shank and Tooth Remove and Install

1.

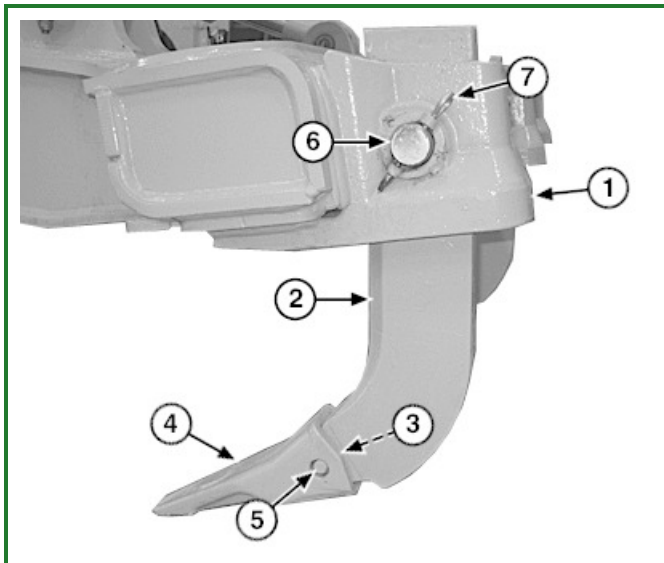

TX1094250A-UN: Shank and Tooth

LEGEND:

- 1 - Ripper Frame
- 2 - Shank (3 used)
- 3 - Retainer (3 used)
- 4 - Tooth (3 used)
- 5 - Pin (3 used)
- 6 - Pin (3 used)
- 7 - Cotter Pin (3 used)

Prepare machine for service. **Park and Prepare for Service Safely** . (Group 0001.)

2.

⚠ CAUTION:

Prevent possible crushing injury from heavy component. Use appropriate lifting device.

Support ripper in up position.

Item	Measurement	Specification
Ripper Weight		685 N·m 1510 lb.

3.

⚠ CAUTION:

Prevent possible crushing injury from heavy component. Use appropriate lifting device.

Attach appropriate lifting device to remove shank (2) and tooth (4).

Item	Measurement	Specification
Shank and Tooth	Weight (approximate)	30 kg 70 lb.

4. Remove cotter pin (7), pin (6), and shank and tooth.
5. Remove pin (5), retainer (3), and tooth (4) from shank.
6. Repair or replace parts as necessary.
7. Install tooth to shank with pin and retainer.

8.

 **CAUTION:**

Prevent possible crushing injury from heavy component. Use appropriate lifting device.

Install shank and tooth to ripper.

Item	Measurement	Specification
Shank and Tooth	Weight (approximate)	30 kg 70 lb.

Go to [Section_42:Group_4201](#)

RM58335,00013AE-19-20110705