


---

## Secondary (Safety) Element

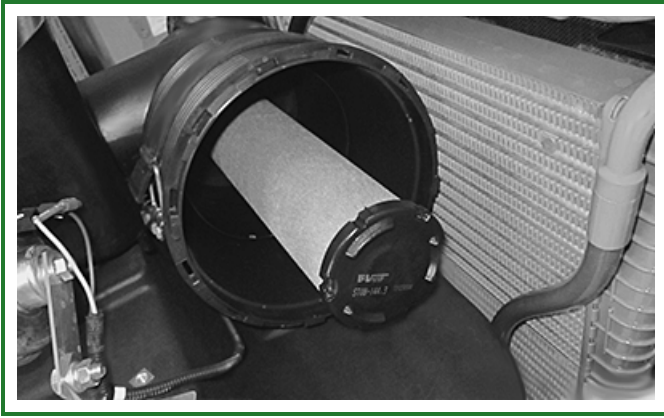

**AGCPTJD0547-UN: Secondary (safety) element**

This filter must be changed if it becomes damaged. Change it at every fifth change of the air filter primary element, and at the latest after 1500 hours of operation.

### IMPORTANT:

Always replace secondary (safety) filter element, do not attempt to clean it.

### INSTALLATION:

Slide a serviced or new primary filter element (rubber seal first) as far as it will go into the filter housing. Put on the cover and close the catches.

### IMPORTANT:

Never close the hood or start the engine unless the filter is locked securely.

OULXBER,00022D8GL-19-20131219

---

## **Replace Alternator Drive Belt**

Ask your John Deere dealer to replace the alternator drive belt.

OULXBER,00022CF-19-20131218