


Change Oil in Front-Wheel Drive Final Drives

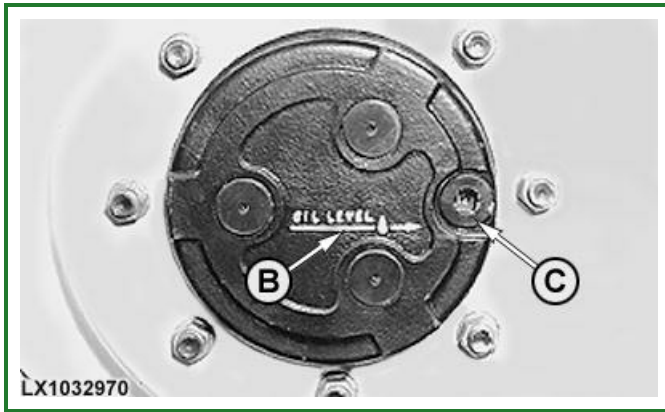

LX1032970-UN: Drain plug

1. Position the tractor on level ground to ensure correct oil levels when refilling.
2. Turn wheel until drain plug (C) is at the bottom. Remove drain plug and drain oil into a suitable container.
3. Turn the wheel until OIL LEVEL mark (B) is horizontal.
4. Refill with John Deere Hy-Gard™ oil; see Front-Wheel Drive Axle Oil in Other Lubricants (section 200E) in this manual. Oil should be level with the plug bore.
5. Reinstall drain plug (C) and tighten to the specification. Repeat steps for the other side.

Item	Measurement	Specification
Plug (C)	Torque	60 N·m 44 lb·ft

IMPORTANT:

Recheck oil level after 30 minutes. Add oil as needed.

For capacities, see capacities in Specifications (section 500A) in this manual.

RA84036,00017E4-19-20180703

Change Brake System Oil

CAUTION:

Any service of the brake system must be performed by your authorized dealer.

RA84036,00017E5-19-20180703