
Engine Serial Number

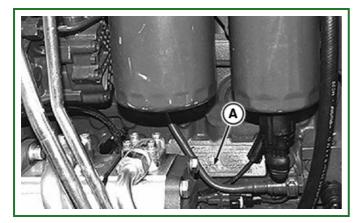

PY28289-UN: . <u>LEGEND:</u>

A - Engine Serial Number Plate


The engine serial number plate (A) is located on the right-hand side of the engine.

-: Engine Serial Number - Engine F5C

Engine Serial Number

SD74272,00003FB-19-20160825

Transmission Serial Number

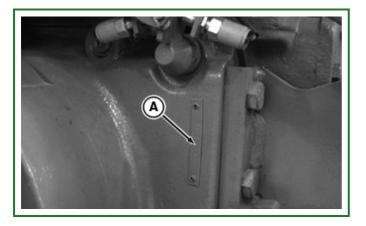

PY28290-UN: Transmission serial number LEGEND: A - Transmission Serial Number Plate

The transmission (drivetrain) serial number (A) is located at the rear of the machine on the bottom left-hand corner of the PTO housing.

SD74272,00003FC-19-20160825