


## Lubricate Suspended Front Axle

### Suspension Front Axle Rams and Support

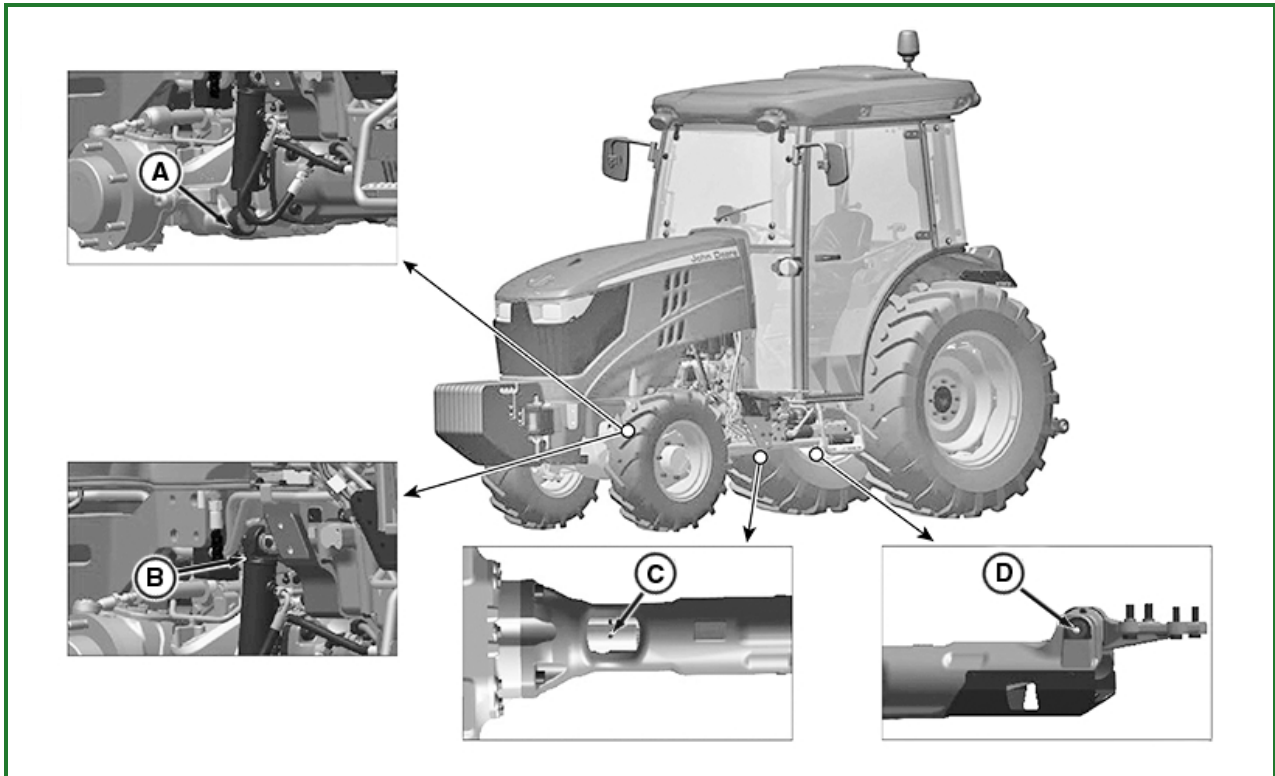

APY11291-UN: .

**LEGEND:**

- A - Grease Fitting, Lower Rams
- B - Grease Fitting, Upper Rams
- C - Grease Fitting, Front Axle Shaft
- D - Grease Fitting, Lower Joint Support

### Suspension Front Axle Rams and Lower Support

1. Park the tractor on a flat surface.
2. Clean the grease nipples (A), (B), (D) on each side of tractor and lubricate.

**NOTE:**

*The suspension rams and the lower joint support must be lubricated every 100 hours.*

### Suspension System Front Axle Shaft

1. Park the tractor on a flat surface.
2. Clean the grease nipples (C) and lubricate.


**NOTE:**

*The front axle shaft must be lubricated every 500 hours.*

**NOTE:**

*Do not perform any interventions on the hydraulic system of the front suspended axle. Ask your authorized dealer to perform this service.*

## Suspension Front Axle Steering Pilot

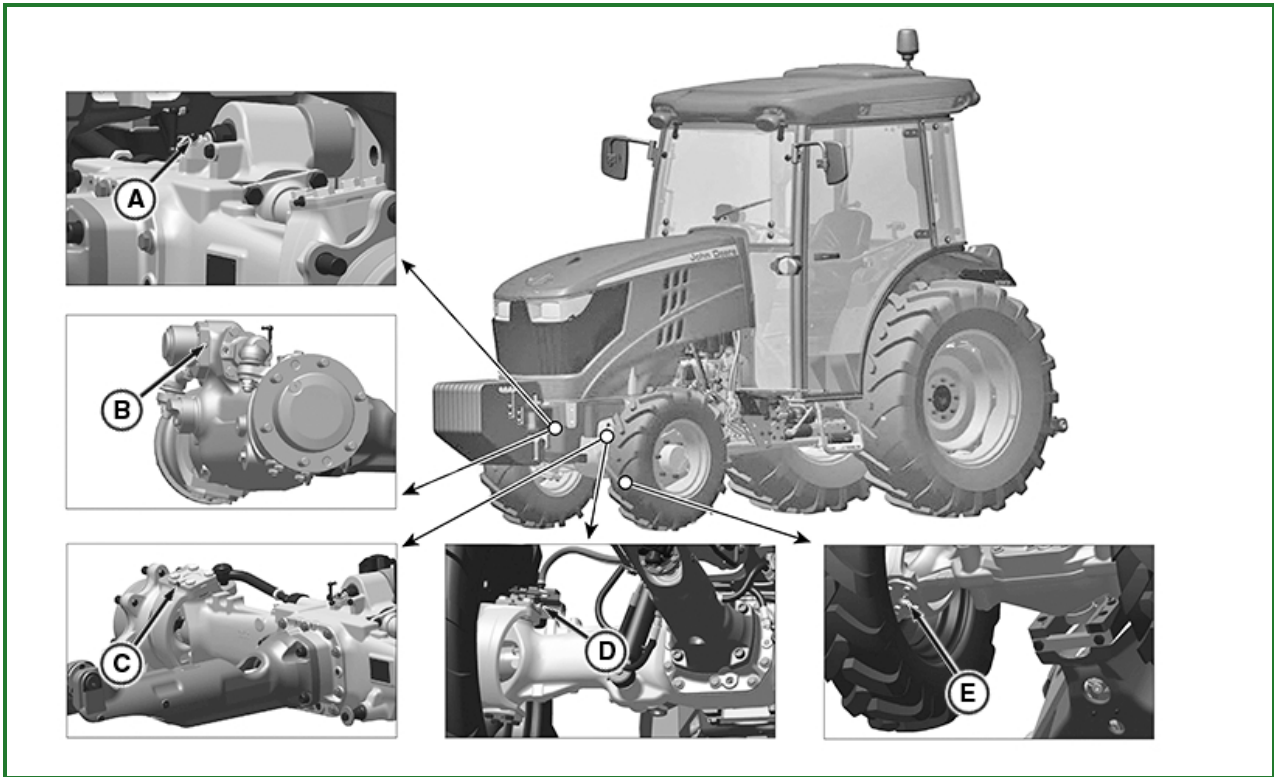

**APY11292-UN: .**

**LEGEND:**

- A - Grease Fitting (5GF)
- B - Grease Fitting (5GV, 5GN)
- C - Grease Fitting (tractors without steering sensor)
- D - Grease Fitting (tractors with steering sensor)
- E - Grease Fitting

1. Park the tractor on a flat surface.
2. Clean the grease nipples (A), (B), (C), (D), (E) on each side of tractor and lubricate.

**NOTE:**

*The steering pilot greasing points must be lubricated every 100 hours.*

**NOTE:**

*Do not perform any interventions on the hydraulic system of the front suspended axle. Ask your authorized dealer to perform this service.*