


Engine Serial Number

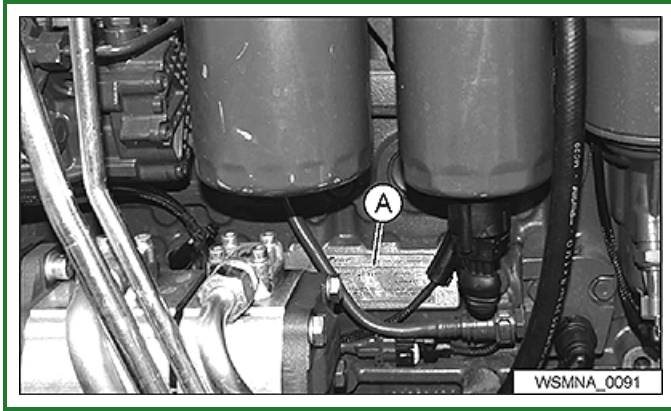

WSMNA0091-UN: .


The engine serial number plate is located on the right-hand side of the engine.

-: Engine Serial Number - Engine F5C

Engine Serial Number

RA84036,0001734-19-20180618

Transmission Serial Number

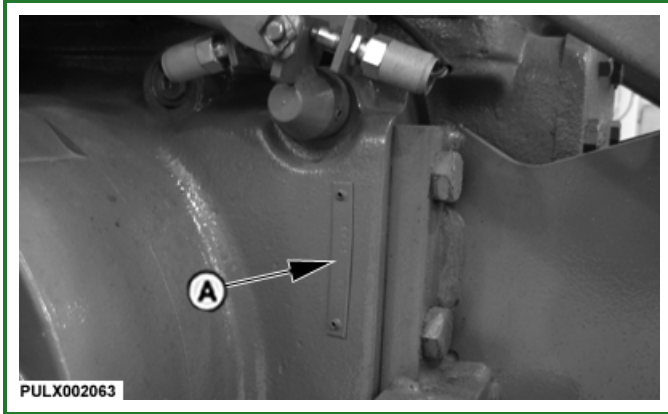

PULX002063-UN: Transmission serial number

The transmission (drive train) serial number (A) is located at the rear of the machine on the bottom left-hand corner of the PTO housing.

RA84036,0001735-19-20180618