


## Remove and Install Selective Control Valve (SCV) - Tractors With Mid-Mounted Couplers


### CAUTION:

*Open rate-of-drop valve and lower hitch arms completely. Move SCV levers in both directions to relieve hydraulic pressure in the system.*

1. Loosen nuts (A) and remove all clips (B).

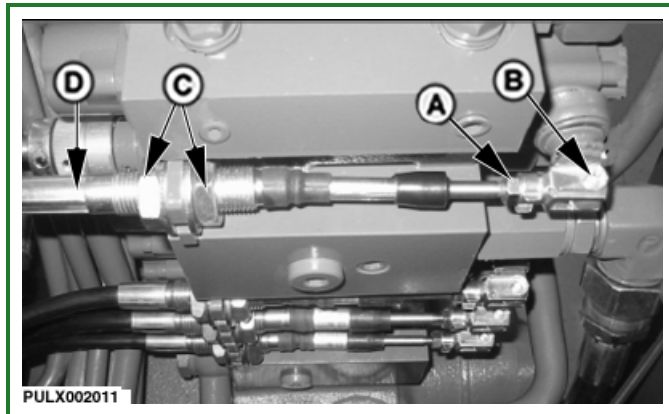


**PULX002011-UN: Disconnect bowden cable**

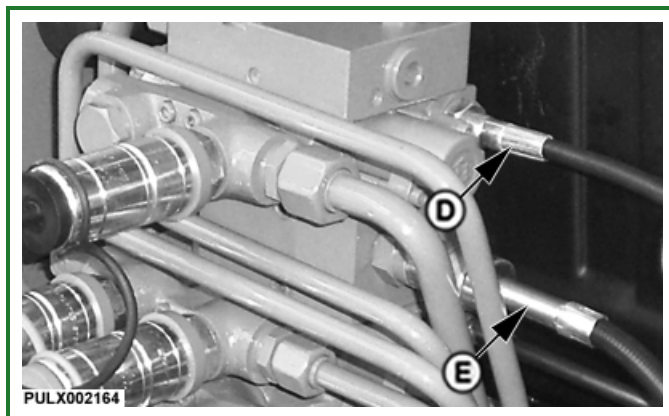


**PULX002164-UN: Disconnect bowden cable**

2. Loosen nuts (C) and disconnect bowden cables (D).
3. Disconnect cable (E).
4. Disconnect hoses (A) to (I).

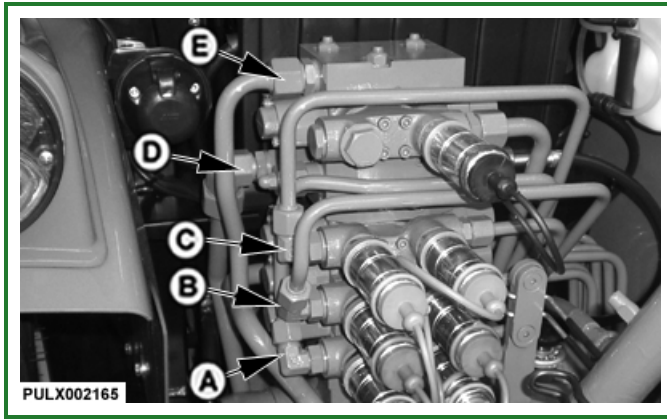

**PULX002165-UN: Disconnect hoses**

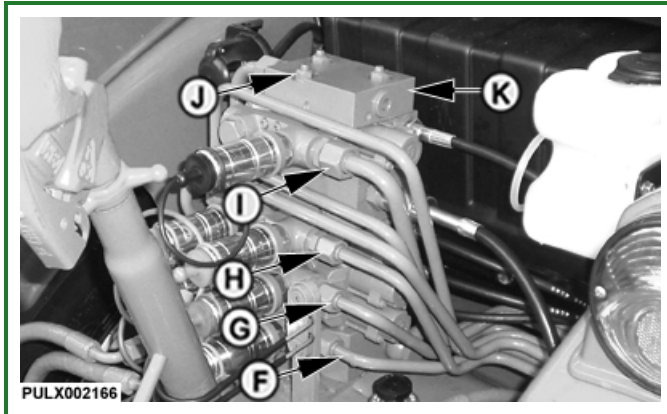

**PULX002166-UN: Disconnect hoses**

5. Remove nuts (J).
6. Remove end plate (K) and the selective control valves.
7. Make repairs as necessary, see [Disassemble, Inspect and Assemble Selective Control Valve](#) in this Group.
8. IMPORTANT:  
 Always use new O-rings. Damaged or used O-rings will leak.  
 Replace O-rings.
9. Reinstall selective control valves and end plate (N) tightening nuts (M) to specification.

Item	Measurement	Specification
Selective Control Valve Nut	Torque	60 N•m 45 lb-ft

10. Reconnect cable (E).