


Remove, Inspect, and Install Air-Conditioning Condenser

1.

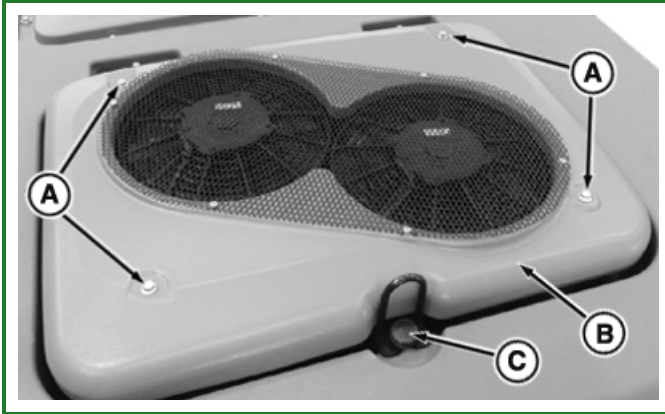

PY25991-UN: .

LEGEND:

A - Screw (4 Used)

B - Fan Cover

C - Knurled-head Screw

Disconnect the Battery. See S900 - Battery Cut-off Switch in section 40, Group 05.

CAUTION:


Discharge air-conditioning system. See Discharging the System in this Section 90, Group 15.

2. Remove the four screws (A).


3. Remove the fans cover (B).

4. Loosen knurled-head screw (C).


5.

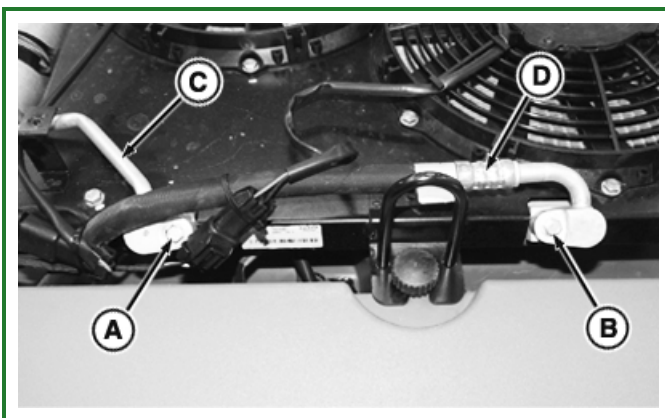

PY25995-UN: .

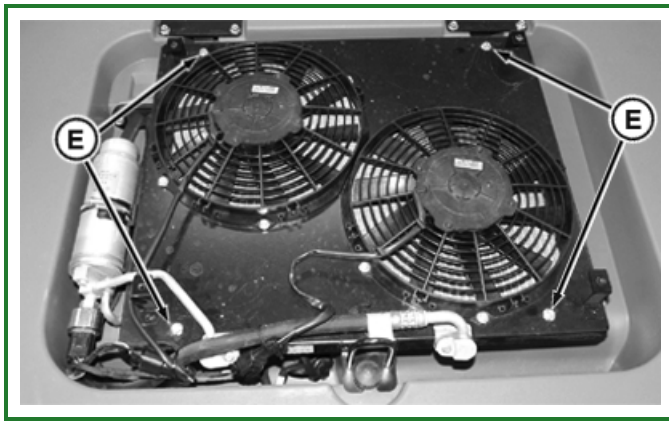

PY25996-UN: .

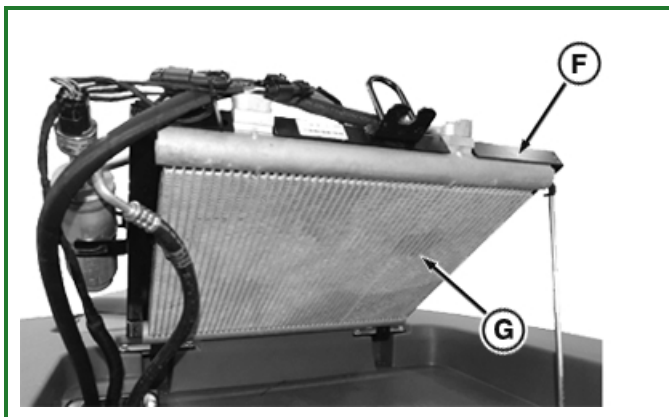

PY25997-UN: .

LEGEND:

- A - Screw
- B - Screw
- C - Refrigerant Line
- D - Refrigerant Line
- E - Screw (4 Used)
- F - Fan Cover
- G - Condenser

Remove screw (A) and (B) and disconnect refrigerant line (C) and (D); seal the openings so that they are air-tight.

6. Remove four screws (E).
7. Lift up the fans cover (F) and remove the condenser (G).
8. Clean condenser (G) with compressed air or water. Straighten any bent fins.

CAUTION:

Reduce compressed air pressure to less than 210 kPa (2 bar) (30 psi) when using for cleaning purposes. Clear area of bystanders, guard against flying chips, and wear personal protection equipment including eye protection.

9. Check that the condenser (G) is intact. Replace if necessary.
10. Install all parts in reverse order.