
# Post-Cover Disassembly and Assembly (5GL) (Cab)

1.

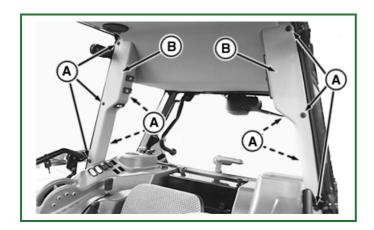

#### APY06427-UN: .


#### **LEGEND:**

- A Fixing Clips
- **B** Post Covers

Disconnect the Battery. See S900 - Battery Cut-Off Switch in Section 40, Group 05.

- 2. Remove the ten fixing clips (A) from the left and the right side post-covers (B).
- 3. Release slightly the left and right side post-covers.

4.

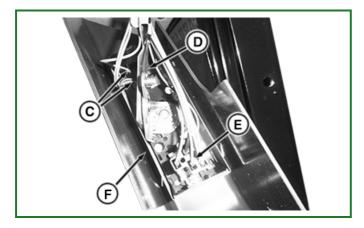

#### APY06428-UN: .


#### **LEGEND:**

- C Pins
- D Bowden Cable
- E Connector
- F Heater Control Unit

Disconnect the main connector (E) from the internal side of the air conditioner and heater control unit (F).

- 5. Disconnect the two pins (C) from the internal side of the air conditioner and heater control unit (F).
- 6. Disconnect the Bowden cable (D).
- 7. Disassemble the air conditioner and heater control unit box (F) and all the parts not provided with the post-cover.

8.

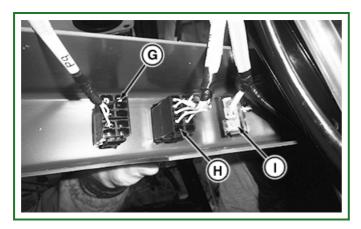


### APY06429-UN: .

Disconnect the connectors of the work light switch (G), the front wiper switch (H), and the courtesy light switch (I).

## NOTE:

Mark each individual connection to facilitate the reassembly.

9.

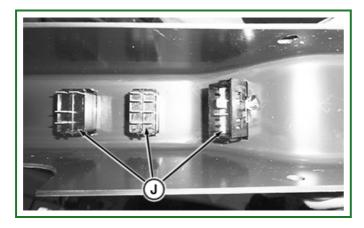

## APY06430-UN: .

## **LEGEND**:

J - Switches

Recover the switches (J) and all the parts not provided with the post-cover.

10.

