


## Removing Hydraulic Cylinder

1. Relieve hydraulic system pressure. See “Relieving Hydraulic System Pressure” in this Group.

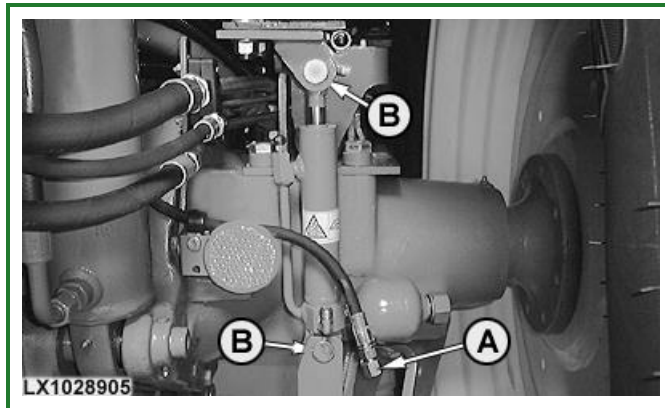

LX1028905-UN: Disconnect hydraulic hose from hydraulic cylinder

- 2.

*NOTE:*

*What follows applies to both of the cab suspension accumulators.*

Disconnect the hydraulic hose (A) from hydraulic cylinder.

3. Remove locking plates (B) and pull out pins.

### **⚠ CAUTION:**


***When removing, remember that the hydraulic cylinder is heavy!***

Go to [Section\\_90:Group\\_30](#)

LX25458,0000150-19-24MAY02

## Installing Hydraulic Cylinder

1. Attach hydraulic cylinder using the pins and secure with locking plates (B).

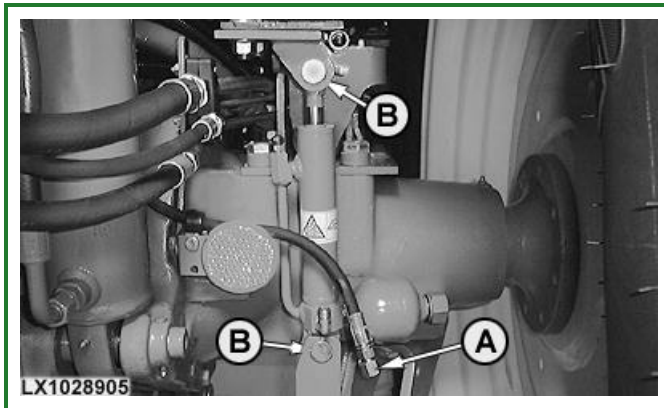

LX1028905-UN: Disconnect hydraulic hose from hydraulic cylinder

**NOTE:**

*What follows applies to both of the cab suspension accumulators.*

2. Tighten hydraulic hose (A) to the specified torque.

Item	Measurement	Specification
Hydraulic hose to cylinder	Torque	16 N·m 12 lb-ft

Go to [Section\\_90:Group\\_30](#)

LX25458,0000151-19-24MAY02