


## Remove and Install Seat and Support

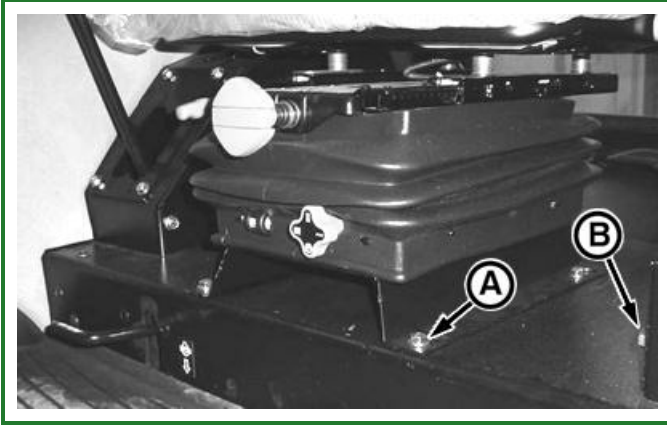

**P13221-UN: Support cap screws**



**P13222-UN: Cover and cap screws**

**LEGEND:**

A - Support Cap Screws (4 used)

B - Cap Screws and Cover (5 used)

C - Harness Connector


1. Remove support cap screws (A).
2. Remove cap screws and cover (left console) (B).
3. Disconnect harness connector (C).
4. Remove seat and support from tractor. Repair or replace as necessary.
5. Install seat and support with cap screws (A).
6. Connect harness connector (C).
7. Install cover and cap screws (B).

Go to [Section\\_95:Group\\_20](#)

PX03972,000009C-19-20040930

## Comfort Seat MSG83

### Remove and install the lap-strap

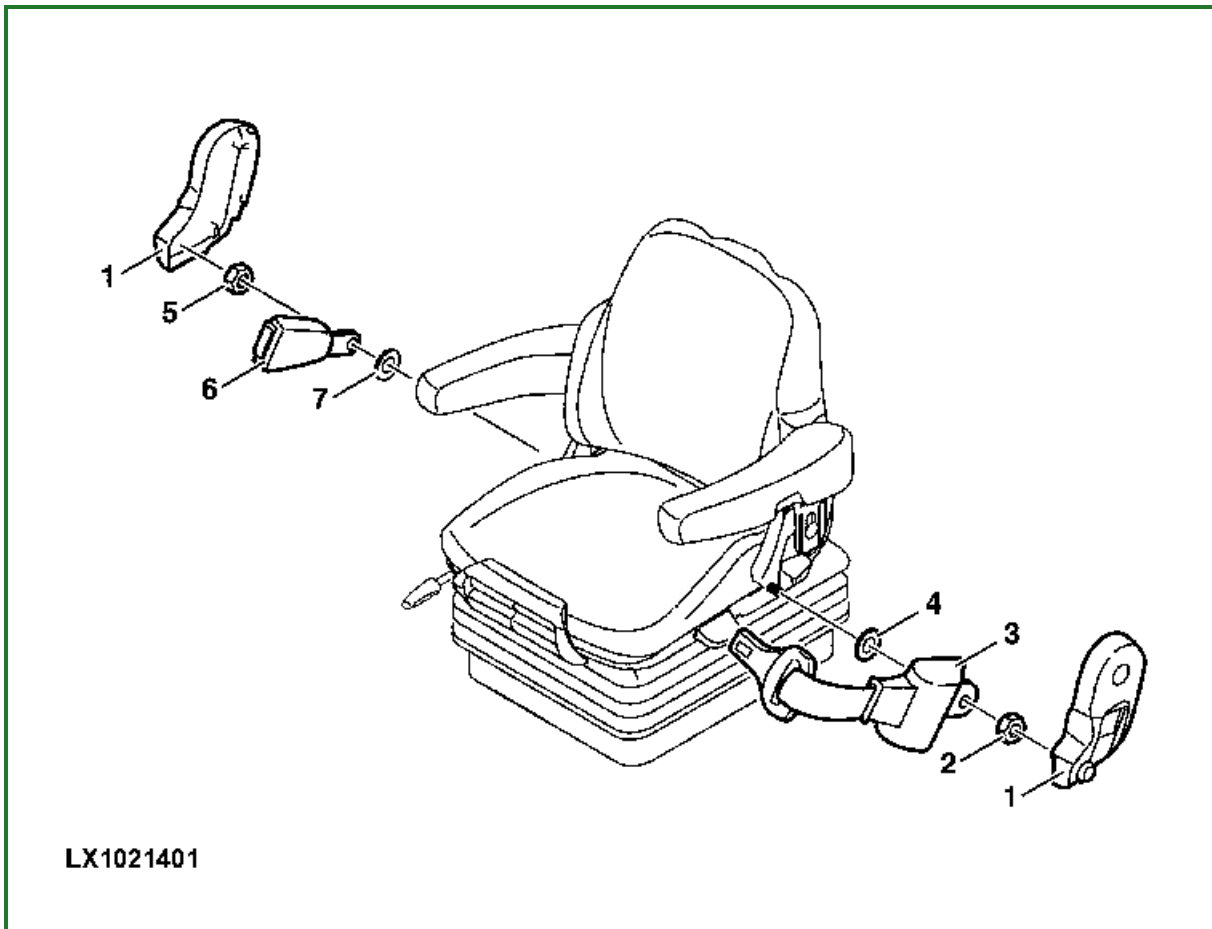

#### LX1021401-UN: Lap-strap

Take off covers (1).

Take off the hex. nut (2).

Remove lap-strap (3) and washer (4).

Remove parts 5 to 7 in the same way.

Install and reassemble in reverse order.

**IMPORTANT:**

Tightening torque on hex. nuts (2) and (5) is 50 N·m (37 lb-ft).

### Remove and install the backrest