


5. Remove 8 mounting bolts (1a) and panel cover (1). [^{*2}]




6. Remove 2 pieces (9) and 1 piece (10) of the monitor panel mounting bolts. [^{*3}]

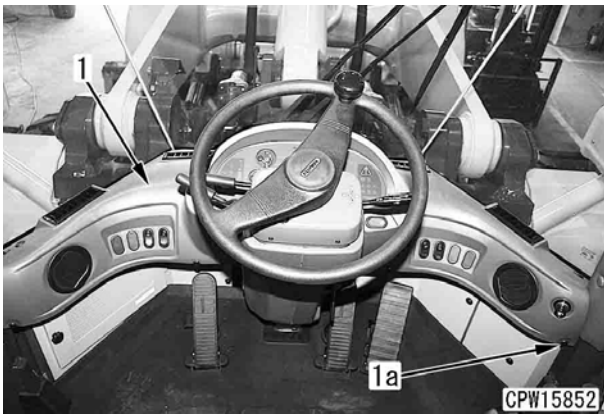


7. Reverse monitor panel assembly (11) halfway and disconnect the following connectors from the rear side.
- (12): —
 - (13): CN-L30
 - (14): CN-L28
 - (15): CN-L27
 - (16): CN-L26
 - (17): CN-L25
 - (18): CN-L29
 - (19): CN-L24
- ★ Take care not to strain the wiring since it is short.

8. Remove monitor panel assembly (11).

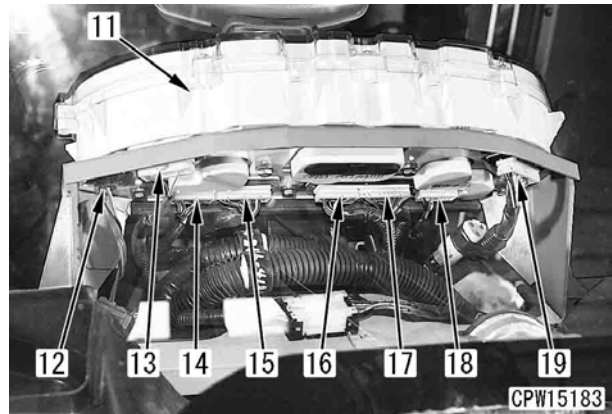

9. Disconnect wiper water hose (12) from the front outside of the cab.


10. Remove wiper blades (13).

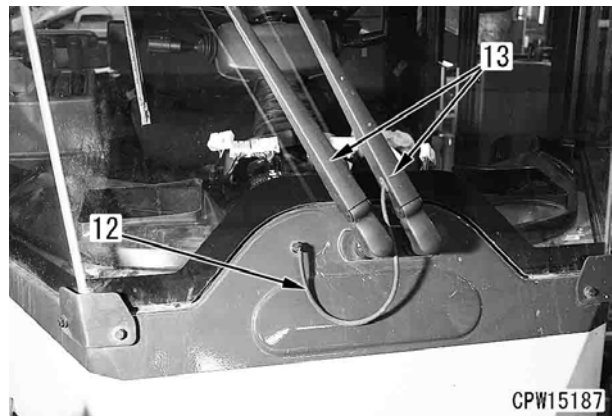

11. Disconnect wiper water hose (14) from the inside of the cab.

12. Disconnect wiper wiring harness connector (15).

13. Remove wiper motor assembly (16).

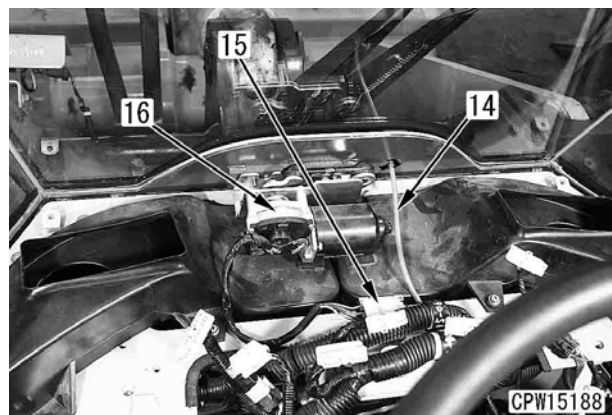

14. Remove left duct (17) and right duct (18).



15. Disconnect right lower duct hose (19).

16. Remove 8 mounting bolts (20) and plate (21).




17. Remove left cover (22).


18. Disconnect the following wiring harness connectors.

- (23): CN-C50
- (24): CN-C49
- (25): CN-AL1

19. Remove air conditioner internal air filter case (26).

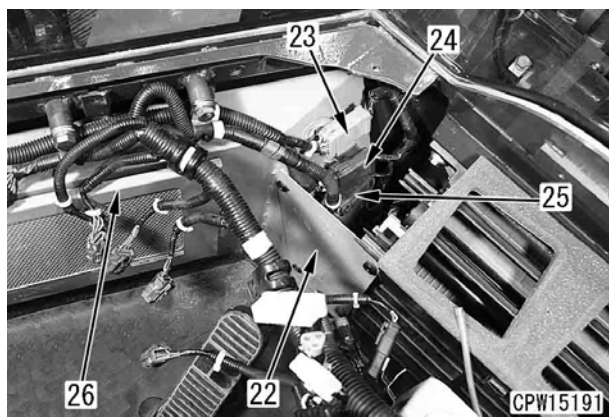

20. Disconnect wiring harness connector (28) and fuse (29).

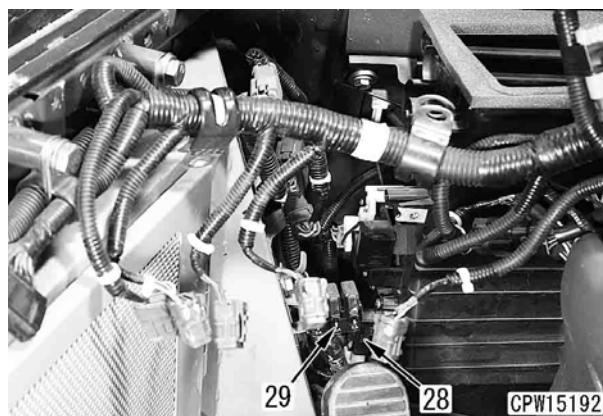

21. Remove right cover (30).



22. Disconnect heater hoses (32) and (33) and air conditioner pipes (34) and (35) at the lower right of air conditioner unit (31).

★ Plug the disconnected hoses and ports to prevent foreign matter from entering them.

[*4]

23. Disconnect wiring harness connector (36).

