


Parking the Machine



TX1087012A-UN: Switch Panel

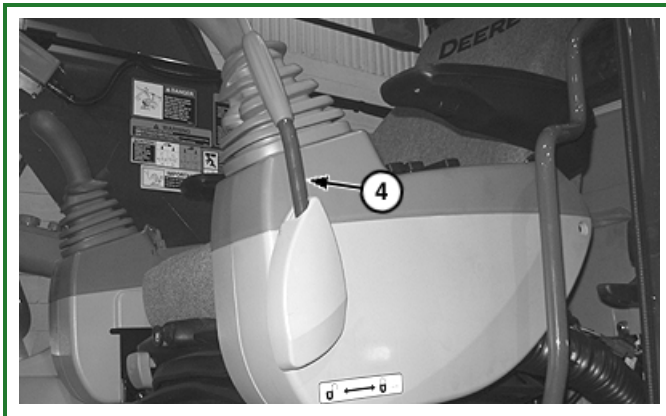

TX1087013A-UN: Pilot Shutoff Lever

LEGEND:

- 1 - Auto-Idle Switch
- 2 - Engine Speed Dial
- 3 - Key Switch
- 4 - Pilot Shutoff Lever

1. IMPORTANT:

During freezing weather, prevent damage to undercarriage components from frozen mud and dirt. Machine must be parked on a solid level surface to prevent tracks freezing in the ground.

Park machine on a solid level surface.

During freezing weather, clean mud and dirt from tracks, rollers and track frames. Clean the steps and walkways after parking the machine.

If tracks are frozen in the ground, slowly raise the machine using boom to free the tracks. Move machine carefully.

- 2. Lower equipment to the ground.

3. Turn auto-idle switch (1) to the A/I OFF position.

4. IMPORTANT:

Turbocharger can be damaged if procedure to shutdown engine is not done properly.

Run engine with engine speed dial (2) at 1/3 position without load for 2 minutes.

5. Turn engine speed dial to slow idle position.

6. Turn key switch (3) to the OFF position. Remove key from switch.

7. Place pilot shutoff lever (4) to locked (UP) position.

8. IMPORTANT:

Prevent cab electrical component damage from bad weather. Windows, roof vent, and cab door must be closed to prevent rain from entering.

Close windows, roof vent, and cab door.

9. Lock all access doors and compartments.

ER79617,0000DCF-19-20120109