


6.

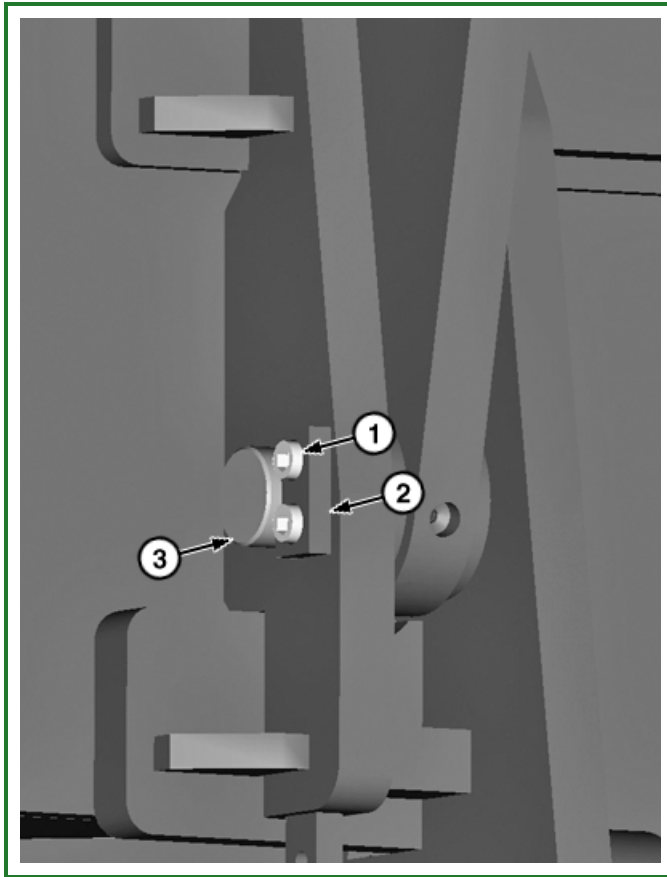

TX1184451A-UN: Counterweight Removal Device Retainer and Pin

LEGEND:

- 1 - Cap Screw (4 used)
- 2 - Retainer (2 used)
- 3 - Pin (2 used)

Remove cap screws (1).

7. Remove pins (3) and retainers (2).

8.

CAUTION:

Prevent possible crushing injury from heavy component. Use appropriate lifting device.


Using appropriate lifting device, remove counterweight removal device.

Item	Measurement	Specification
Counterweight Removal Device (with yoke assemblies)	Weight (approximate)	550 kg 1213 lb

9.

CAUTION:

Prevent possible crushing injury from heavy component. Use appropriate lifting device.

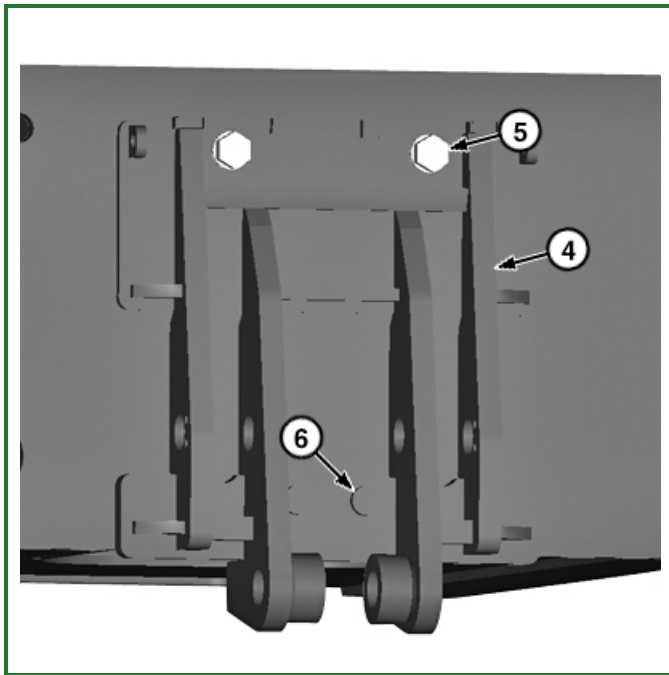**TX1184433A-UN: Bracket****LEGEND:**

- 4 - Bracket
- 5 - Cap Screw (2 used)
- 6 - Cap Screw (2 used)

Attach appropriate lifting device to bracket (4). Remove cap screws (5 and 6) and bracket.

Item	Measurement	Specification
Bracket Weight (approximate)	203 kg 448 lb	

10. Repair or replace parts as necessary.
11. Install bracket and cap screws (5 and 6). Tighten cap screws to specification.

Item	Measurement	Specification
Cap Screw (5) Torque		2650 N·m 1955 lb·ft
Cap Screw (6) Torque		700 N·m 516 lb·ft

12.

 CAUTION:

Prevent possible crushing injury from heavy component. Use appropriate lifting device.

Using appropriate lifting device, install counterweight removal device and pins.

Item	Measurement	Specification
Counterweight Removal Device (with yoke assemblies)	Weight (approximate)	550 kg 1213 lb